

X-Cite Product	Supported by Windows 11
NOVEM	✓
XYLIS/XYLIS II	✓
TETREM	✓
mini+	✓
110LED	✓
XLED	with Win 11 driver download
TURBO	✓
exacte	with Win 11 driver download
120PC	RS232 via USB adaptor*

✓ = Product uses the generic USB driver which is included in your Windows 11 system. Simply connect X-Cite and the PC via USB cable. No download or internet connection is required.

* = 120PC is controllable via RS232 and not USB hence there is no windows driver. A RS232 to USB adapter is required. Please check the manufacturers website of your USB to RS232 adaptor for the appropriate Windows driver.

The X-Cite unit will be listed as “USB Serial Device” in the COM port list:

