



**Kepri™ UVC Upper-Air
Disinfection System**
Safe & Effective UVC LED Light Source



Safe & Effective Room Air Disinfection


excelitas®

Kepri™ UVC Upper-Air Disinfection System




The Evolution of UVC Disinfection Technology



The LED-based Kepri™ UVC Upper-Air Disinfection System provides real-time disinfection of upper-level room air regardless of room occupancy. Kepri's potent UVC energy is effective against pathogens including bacteria, mold and viruses.

Easy Installation


Weighing only 5.5 lbs. (2.5 kg), the Kepri Upper-Air Disinfection System is easy to install using the adaptable mounting bracket with 110-240V wall plug/cable. The compact, low-profile design affords unassuming installation in a wide variety of spaces. It features low noise operation and a dust free optical chamber design to minimize maintenance requirements and ensure maximum UVC emission.

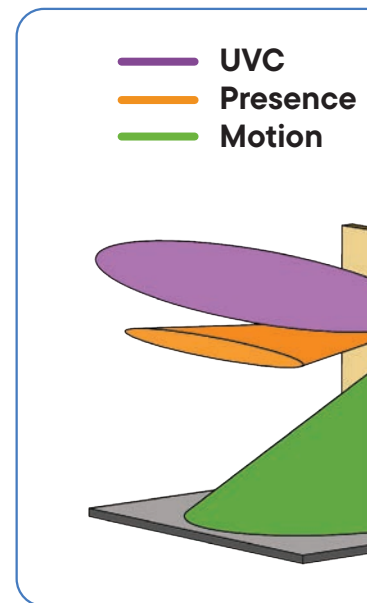

The Upper-Air Concept

The Kepri Disinfection System irradiates the upper atmosphere of a room with UVC light allowing for safe disinfection even when the room is occupied. As pathogens pass through the active UVC disinfection zone, the UVC light damages the pathogens' DNA/RNA, preventing its ability to replicate and effectively inactivating its ability to infect and spread.

Natural convection within a room ensures proper air distribution into the UVC emission zone for thorough disinfection in 20 minutes to 99.9% (log 3).

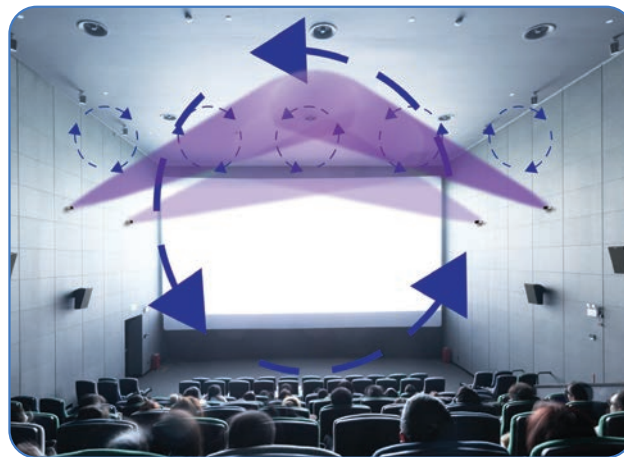




Occupant-Safe Operation

As safety is critical in UVC disinfection, Excelitas sets the industry standard with a three-tiered sensor monitoring system to ensure safe operation, even in fully occupied rooms.

- The **Tilt Sensor** will turn off the Kepri disinfection unit in the event the unit falls below zero degrees on the horizon. The tilt sensor is a safety feature to ensure no harmful UVC energy is emitted into the lower part of the room.
- **Presence sensor** detects anyone in the UVC central emission field (i.e. changing a lightbulb on a ladder) and immediately turns off the UVC emission until the emission field is clear.
- **Motion-Activated Occupancy Sensor and Switch** detects movement in the room and allows the user to select their individual operating preference using a three position selectable switch. The switch can be set in the following three modes.
 - Always on
 - Only on when the room is Occupied
 - Only on when the room is Unoccupied.

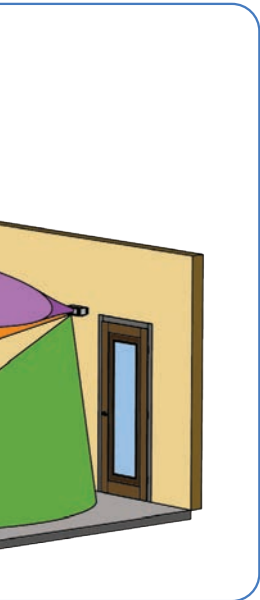

Additionally, because Kepri is LED-based, it disinfects without any potentially toxic Mercury (Hg) and without emitting any harmful or environmentally unfriendly ozone gas.

Excelitas meets a stringent UL-8802 standard which limits the amount of UVC energy into the lower part of the room, assuring safe operation.

Effective Pathogen Elimination

Third-party testing shows that Kepri reduces the airborne viral load by 99% in as little as 20 minutes. Please visit our website for additional documentation such as the user's manual and disinfection efficacy test report.



Features & Benefits

- Motion-Activated Occupancy Sensor & Switch offers 3 operating modes
- Integrated tilt sensor ensures safe upward UVC emission
- Presence sensor shuts off UVC if someone enters emission field
- Environmentally friendly... energy efficient with no Mercury or ozone emission
- Low maintenance
- Adjustable mounting bracket
- Replaceable LED light source

Effective Air Disinfection for

- Medical & dental facilities
- Long-term care facilities
- Classrooms & lecture halls
- Offices & conference rooms
- Restaurants & bars
- Theaters & casinos
- Airports & train stations
- Cruise ships & hotels
- Gyms & locker rooms
- Food processing plants
- Manufacturing facilities



Parameter	Value	Units
Input voltage / frequency	90/240 [50/60]	VAC [Hz]
Weight (bracket and device)	5.5 (2.5)	lbs. (kg)
Minimum mounting height*	90.5 (2.3)	in. (m)
Power consumption	30	W
Wavelength (typical)	270	nm


*Measured from the bottom of the bracket.

Warning: UVC ultraviolet rays are harmful to the eyes and skin. Avoid exposure to direct or reflected UVC rays.

Safety
CE Marked CAN/CSA C22.2 No. 250.0-18_4th Ed. UL 1598_4th Ed.-2018, UL 8802_Issue 4_August-2021, IEC 61020-1:2010/A1:2016, EN 61010-1:2010/A1:2019, IEC 62471:2006 (First Edition)

Dimensions in inches (mm)

Part Number 010-00490R

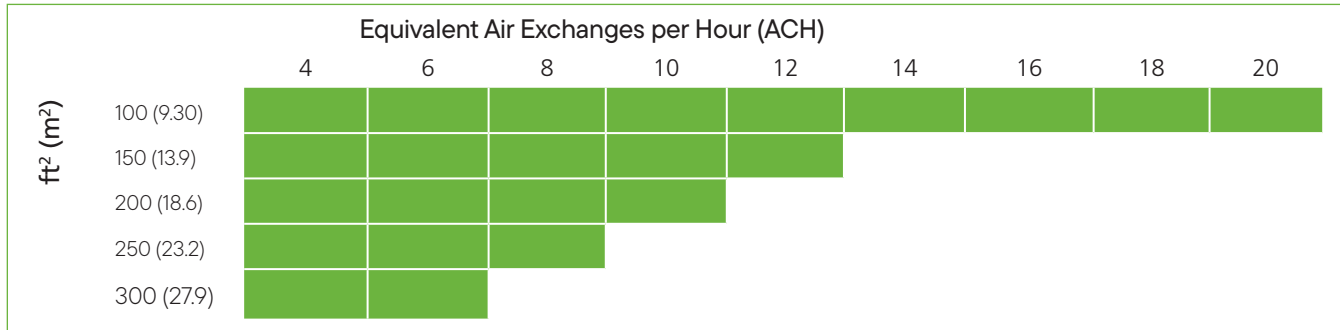

1. Equivalent air exchanges per hour (ACH) for a room with a 10ft (3.0m) ceiling.
2. Values are extrapolated from Intertek test data dated Dec 17, 2021- available on our website. Original single point test measured a 99.9% reduction of Coliphage φX174 (typical single stranded virus) in 20 minutes. Equivalent air exchanges for other pathogens will differ.
3. The times given assume perfect air mixing within the space (i.e. mixing factor = 1). Disinfection rates are dependent on-air mixing. The following equivalent air exchange (ACH) data should only be used as a best-case guideline.
4. For more information, please refer to the CDC guidelines for Environmental Infection Control in Health-Care Facilities (2003) Appendix B and the CDC Upper-Room Ultraviolet Germicidal Irradiation (UVGI) web page.

About Excelitas

Excelitas is the leading provider of advanced, life-enriching technologies that make a difference, serving global market leaders in the life sciences, advanced industrial, next-generation semiconductor, aerospace and defense end markets. Headquartered in Pittsburgh, PA, USA, Excelitas is an essential partner in the design, development and manufacture of photonic technologies, offering leading-edge innovation in sensing, detection, imaging, optics and specialty illumination for customers worldwide.



excelitas.com

Tel: (+1) 905.821.2600
Toll-free: (+1) 800.668.8752

For a complete listing of our global offices, visit excelitas.com/locations

© 2025 Excelitas® and Excelitas Technologies® are registered trademarks and Kepri™ is a trademark of Excelitas Technologies Corp. All other products and services are either trademarks or registered trademarks of their respective owners. Excelitas reserves the right to change this document at any time without notice and disclaims liability for editorial, pictorial or typographical errors.

L-SS_BR-Keprl UVC Upper-air_2025.01-V4-INTERIM