



FUSION Micro-Imaging Lens System Visible to SWIR (400-1700nm)

Covering the optical, mechanical,
and operational parameters of
FUSION system components.

Now Supports Key Visible, NIR and SWIR
wavebands



Table of Contents

HOW TO USE THIS GUIDE

Configuring your Optem FUSION Lens System now with  compatibility.....	3
---	---

LENS SYSTEM COMPONENT OPTIONS

Optem FUSION Component Matrix.....	4-5
------------------------------------	-----

OPTICAL PERFORMANCE CHARTS

Fixed Magnification	6-7
Fixed w/Mini Tube Magnification	8-9
Fixed Magnification w/ LWD Objectives	10-11
Fixed Magnification w/Mini Tube w/ LWD Objectives	12-13
7:1 Zoom with Lower Lens	14-15
7:1 Zoom w/Mini Tube with Lower Lens	16-17
7:1 Zoom w/ LWD Objectives	18-19
7:1 Zoom w/Mini Tube w/ LWD Objectives	20-21
12.5:1 Zoom and Fetura+ with Lower Lens	22-23
12.5:1 Zoom and Fetura+ w/Mini Tube with Lower Lens	24-25
12.5:1 Zoom and Fetura+ w/ LWD Objectives	26-27
12.5:1 Zoom and Fetura+ w/Mini Tube w/ LWD Objectives	28-29
Wide Angle Lens with Lower Lens	30-31
Fixed Zoom and 7:1 Zoom with  compatibility	32-33
FUSION Flexibility and Notes	34-35



How to use this guide

Optem FUSION is a modular Lens System, which can be modified to affect form, function and performance across the Visible (400-700 nm), the Near Infrared (NIR – 700-1100 nm), and the Short-Wave Infrared (SWIR – 900-1700 nm) wavebands. Follow the steps outlined herein to configure an Optem FUSION Lens System to meet your specific optical, functional and physical configuration requirements. Refer to the **Optical Performance Chart** that matches your chosen Fixed-magnification or Zoom configuration (e.g., with or without Objectives, with Standard or Mini Camera Tubes). Following the flow lines in the **FUSION Component Matrix** (p. 4-5), you can identify the components you will require to configure the lens performance you desire.

1 The first step in configuring your Optem FUSION Lens System is to determine whether you require a fixed field-of-view or a zoom system and what your desired operating wavelength will be (from Visible to SWIR). If you require zoom, determine how much zoom range you require, 7:1 or 12.5:1. This decision will direct you to the correct FUSION **Optical Performance chart** (p. 06 - 33).

2 Your second choice is determining what working distance you require for your system. Specify the correct Lower Lens to best fit your working distance requirements. Working distance is the mechanical space between the bottom of the lens system and your specimen. The addition of a ringlight or right-angle module to the bottom of the system will further reduce this working distance. Using the shortest working distance will provide the best resolution for all systems. Choose longer working distances when necessary to increase your desired field-of-view. Working distances for each Lower Lens is listed just below the Lower Lenses shown across the top of

each **Optical Performance chart**.

You need to know your intended camera format (chip size) to determine the field-of-view for your lens system. If you do not have a particular camera format in mind, use the numbers in the chart to help you determine the best camera chip size selection for your Optem FUSION Lens System.

3 Navigate from the top of the **Component Matrix** down to the Lower Lenses to identify the components needed to complete your FUSION Lens System. Fixed Magnification systems require the Aperture Module 35-07-20-000 for best performance. The correct aperture diameter is provided in the **Fixed Optical Performance Chart** (p. 07 - 13 and p.32).

These steps above are a general guide in configuring your Lens System. Your application may require choosing components in a different order than detailed herein. In this case, refer to the appropriate **Optical Performance chart** and identify your desired parameters (typically field-of-view at high- and low-end zoom) as it relates to your intended camera format.




NOTE:

- Now including Optical Performance Charts for FUSION  systems (p. 32-33).
- With the Optem FUSION System, the optical magnification is the product of the magnification of the Lower Lens, Zoom dial setting (if Zoom and the magnification of the Camera Tube. This formula works even when using Qioptiq Microscope Objectives.


Contact your Qioptiq representative or your Qioptiq dealer for additional help determining your specific requirements.






Optem® FUSION Visible/SWIR Component Matrix

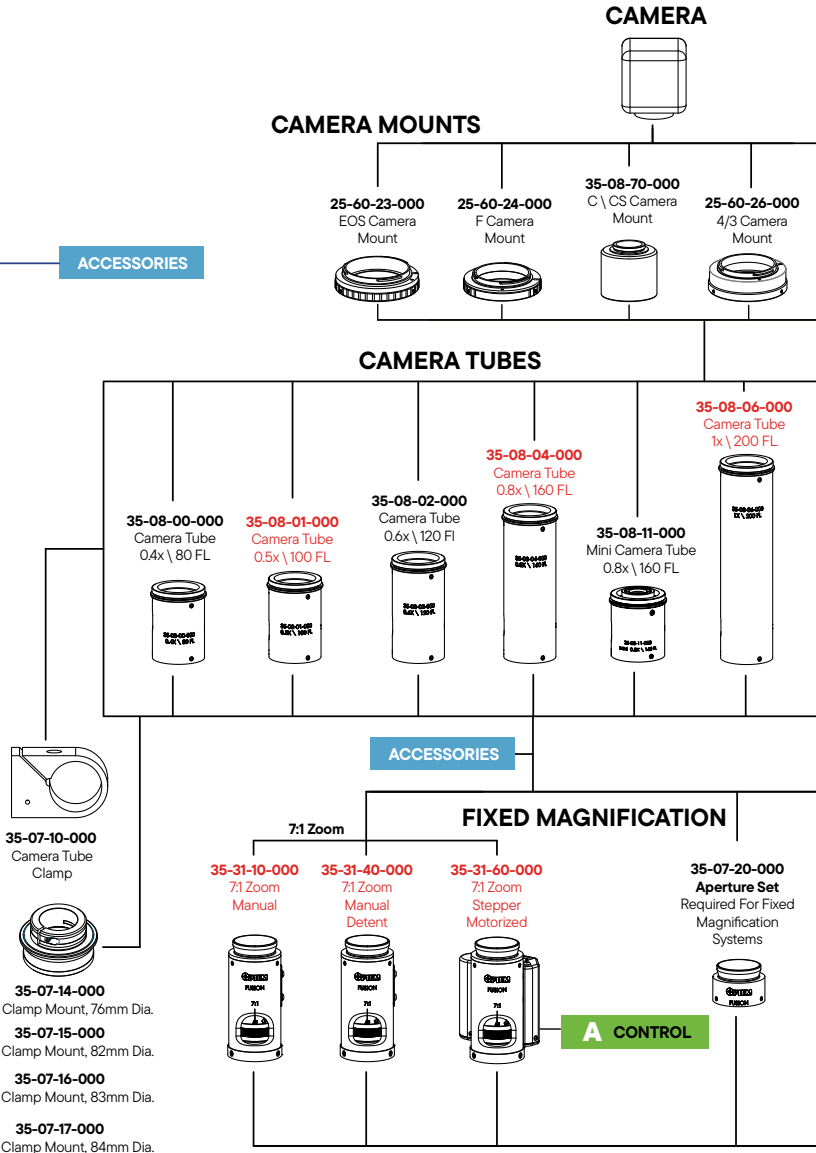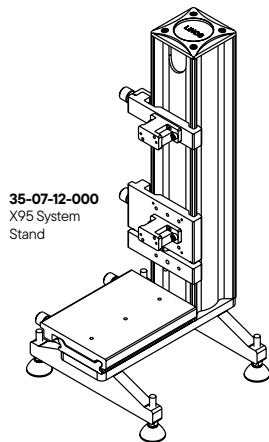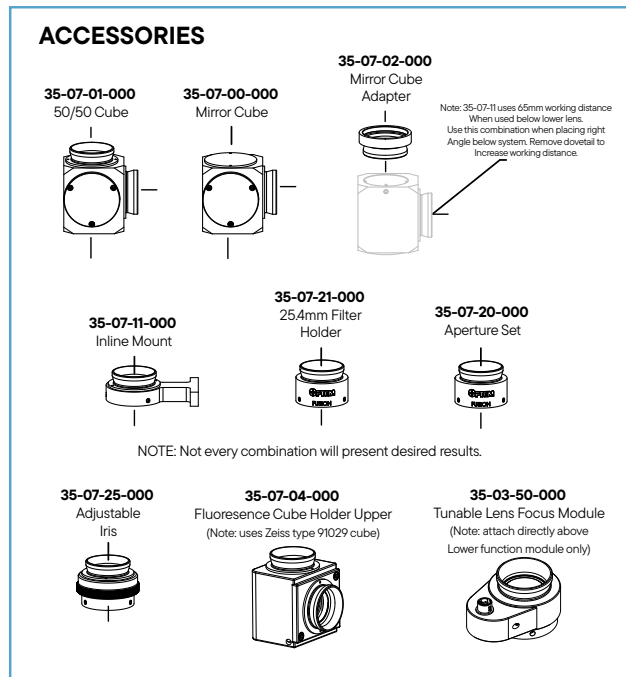




- NOTE:**
- Products listed in **RED TYPE** Indicate **SWIR** version available.
 - For ordering purposes, VISIBLE components are identified by a "35" prefix, while **SWIR** components use a "45" e.g. 35-XX-XX-XXX VISIBLE, and **45-YY-YY-YYY SWIR**
 - All "35-XX" modules are compatible with one another; and all "45-YY" modules are compatible with one another.
 - Using "35-XX" and "45-YY" modules with one another is not recommended.
 - Non-optics mounts/modules are cross-compatible between VISIBLE and **SWIR**

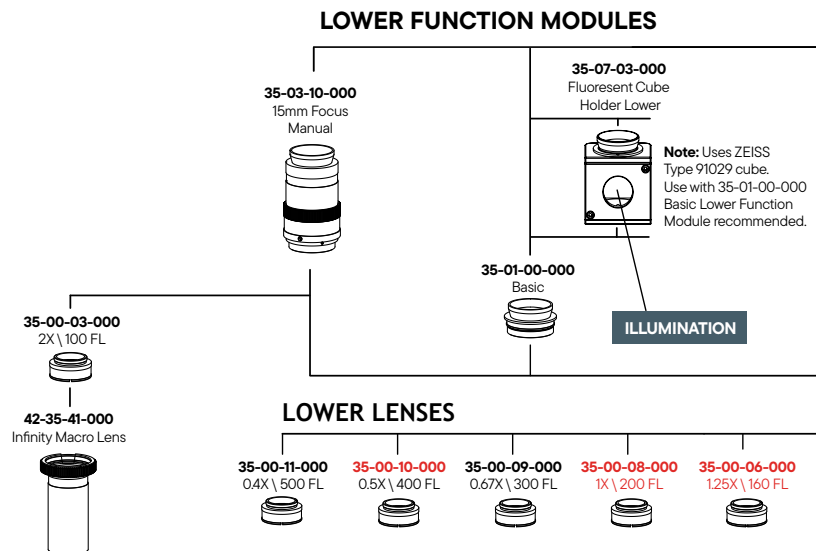

REV: 0825

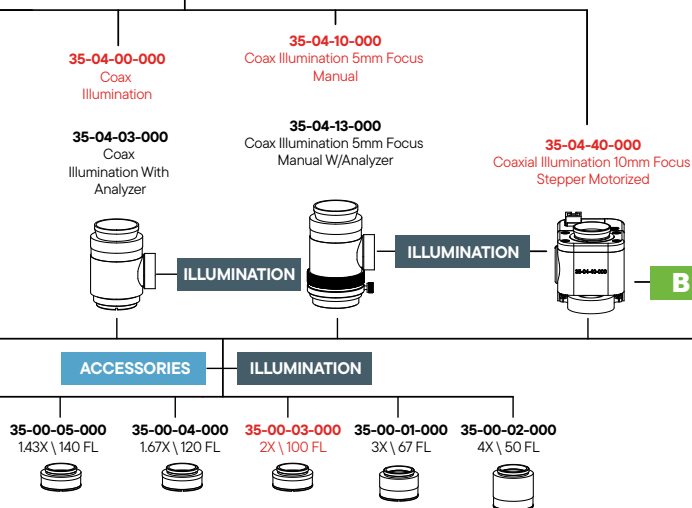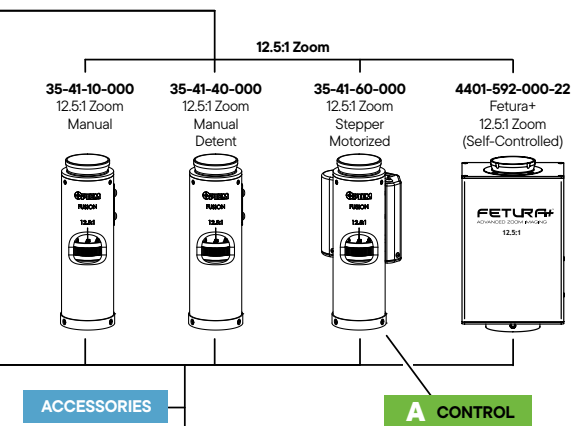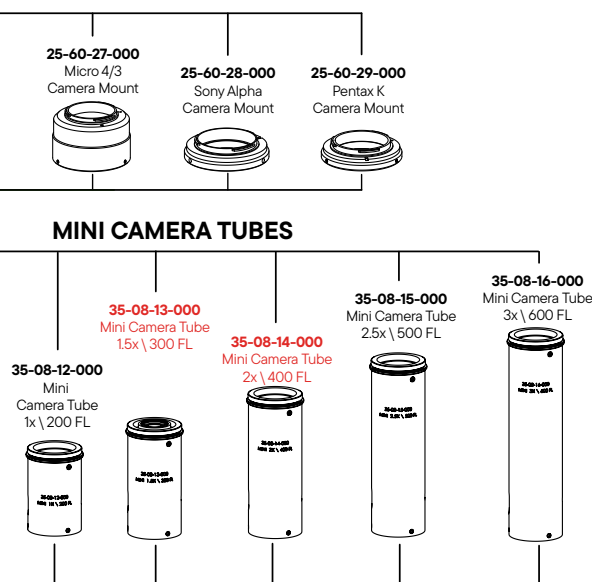

NOTE: Coax Illumination has limited field illumination with large FOVs.

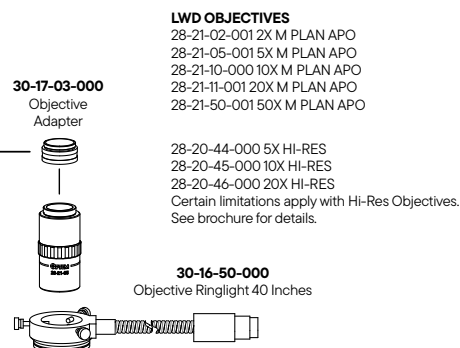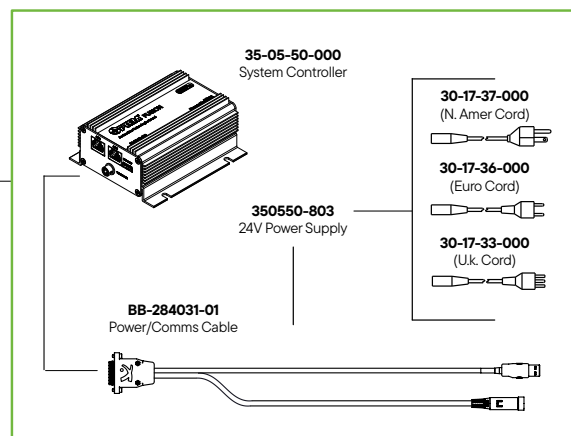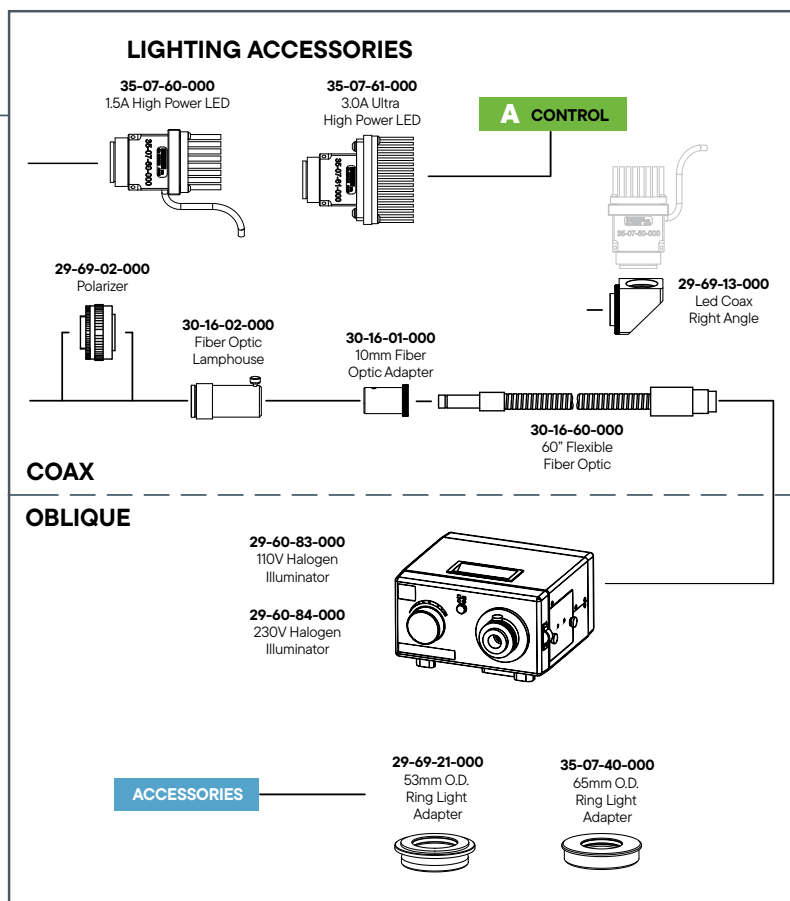

Optical Performance - Fixed Magnification with Lower Lenses

Chart 1A

		0.4X Lower Lens 35-00-11-000 WD: 490mm EFL: 500mm			0.5X Lower Lens 35-00-10-000 WD: 390mm EFL: 400mm			0.67X Lower Lens 35-00-09-000 WD: 290mm EFL: 300mm			1X Lower Lens 35-00-08-000 WD: 190mm EFL: 200mm			
Max FOV Dia.		100			80			60			40			
Max Coax FOV Dia.		13			13			14			12			
0.4X Camera Tube 35-08-00-000 EFL: 80mm Image Circle Dia. (mm) 9.6 5mm Stop	FOV (mm) Cam Format	NA	0.0050			0.0063			0.0083			0.013		
		Res (lp/mm)	15			19			25			38		
		Mag	0.16			0.20			0.27			0.40		
		DOF (mm)	23			15			8.2			3.6		
	FOV (mm) Cam Format	1/3"	23	x	30	18	x	24	14	x	18	9.0	x	12
		1/2"	30	x	40	24	x	32	18	x	24	12	x	16
		2/3"	41	x	55	33	x	44	25	x	33	17	x	22
0.5X Camera Tube 35-08-01-000 EFL: 100mm Image Circle Dia. (mm) 12 5mm Stop	FOV (mm) Cam Format	NA	0.0050			0.0063			0.0083			0.013		
		Res (lp/mm)	15			19			25			38		
		Mag	0.20			0.25			0.33			0.50		
		DOF (mm)	23			15			8.2			3.6		
	FOV (mm) Cam Format	1/3"	18	x	24	14	x	19	11	x	14	7.2	x	9.6
		1/2"	24	x	32	19	x	26	14	x	19	9.6	x	13
		2/3"	33	x	44	26	x	35	20	x	26	13	x	18
0.6X Camera Tube 35-08-02-000 EFL: 120mm Image Circle Dia. (mm) 14.4 8mm Stop	FOV (mm) Cam Format	NA	0.0080			0.010			0.013			0.020		
		Res (lp/mm)	24			30			40			60		
		Mag	0.24			0.30			0.40			0.60		
		DOF (mm)	8.9			5.7			3.2			1.4		
	FOV (mm) Cam Format	1/3"	15	x	20	12	x	16	9.0	x	12	6.0	x	8.0
		1/2"	20	x	27	16	x	21	12	x	16	8.0	x	11
		2/3"	28	x	37	22	x	29	17	x	22	11	x	15
0.8X Camera Tube 35-08-04-000 EFL: 160mm Image Circle Dia. (mm) 19.2 12mm Stop	FOV (mm) Cam Format	NA	0.012			0.015			0.020			0.030		
		Res (lp/mm)	36			45			60			90		
		Mag	0.32			0.40			0.53			0.80		
		DOF (mm)	3.9			2.5			1.4			0.63		
	FOV (mm) Cam Format	1/3"	11	x	15	9.0	x	12	6.8	x	9.0	4.5	x	6.0
		1/2"	15	x	20	12	x	16	9.0	x	12	6.0	x	8.0
		2/3"	21	x	28	17	x	22	12	x	17	8.3	x	11
1X Camera Tube 35-08-06-000 EFL: 200mm Image Circle Dia. (mm) 24 18mm Stop	FOV (mm) Cam Format	NA	0.018			0.023			0.030			0.045		
		Res (lp/mm)	54			68			90			135		
		Mag	0.40			0.50			0.67			1.0		
		DOF (mm)	1.8			1.1			0.63			0.28		
	FOV (mm) Cam Format	1/3"	9.0	x	12	7.2	x	9.6	5.4	x	7.2	3.6	x	4.8
		1/2"	12	x	16	9.6	x	13	7.2	x	9.6	4.8	x	6.4
		2/3"	17	x	22	13	x	18	9.9	x	13	6.6	x	8.8

– Useable FOV Limited by Coax illumination (>50% Illumination)

– FOV Limited by vignetting

1.25X Lower Lens 35-00-06-000 WD: 155mm EFL: 160mm	1.43X Lower Lens 35-00-05-000 WD: 135mm EFL: 140mm	1.67 Lower Lens 35-00-04-000 WD: 110mm EFL: 120mm	2X Lower Lens 35-00-03-000 WD: 95mm EFL: 100mm	3X Lower Lens 35-00-01-000 WD: 50mm EFL: 67mm	4X Lower Lens 35-00-02-000 WD: 32mm EFL: 50mm
32	28	24	20	15	10
12	13	14	15	15	10
0.016	0.018	0.021	0.025	0.037	0.050
47	54	63	75	112	150
0.50	0.57	0.67	0.80	1.2	1.6
2.3	1.8	1.3	0.91	0.40	0.23
7.2 x 9.6	6.3 x 8.4	5.4 x 7.2	4.5 x 6.0	3.0 x 4.0	2.3 x 3.0
9.6 x 13	8.4 x 11	7.2 x 9.6	6.0 x 8.0	4.0 x 5.3	3.0 x 4.0
13 x 18	12 x 15	9.9 x 13	8.3 x 11	5.5 x 7.3	4.1 x 5.5
0.016	0.018	0.021	0.025	0.037	0.050
47	54	63	75	112	150
0.63	0.71	0.83	1.0	1.5	2.0
2.3	1.8	1.3	0.91	0.40	0.23
5.8 x 7.7	5.0 x 6.7	4.3 x 5.8	3.6 x 4.8	2.4 x 3.2	1.8 x 2.4
7.7 x 10	6.7 x 9.0	5.8 x 7.7	4.8 x 6.4	3.2 x 4.3	2.4 x 3.2
11 x 14	9.2 x 12	7.9 x 11	6.6 x 8.8	4.4 x 5.9	3.3 x 4.4
0.025	0.029	0.033	0.040	0.060	0.080
75	86	100	120	180	240
0.75	0.86	1.0	1.2	1.8	2.4
0.91	0.69	0.51	0.35	0.16	0.089
4.8 x 6.4	4.2 x 5.6	3.6 x 4.8	3.0 x 4.0	2.0 x 2.7	1.5 x 2.0
6.4 x 8.5	5.6 x 7.5	4.8 x 6.4	4.0 x 5.3	2.7 x 3.6	2.0 x 2.7
8.8 x 12	7.7 x 10	6.6 x 8.8	5.5 x 7.3	3.7 x 4.9	2.8 x 3.7
0.038	0.043	0.050	0.060	0.090	0.12
113	129	150	180	270	360
1.0	1.1	1.3	1.6	2.4	3.2
0.40	0.31	0.23	0.16	0.070	0.039
3.6 x 4.8	3.2 x 4.2	2.7 x 3.6	2.3 x 3.0	1.5 x 2.0	1.1 x 1.5
4.8 x 6.4	4.2 x 5.6	3.6 x 4.8	3.0 x 4.0	2.0 x 2.7	1.5 x 2.0
6.6 x 8.8	5.8 x 7.7	5.0 x 6.6	4.1 x 5.5	2.8 x 3.7	2.1 x 2.8
0.056	0.064	0.075	0.090	0.13	0.18
169	193	225	270	405	540
1.25	1.43	1.67	2.0	3.0	4.0
0.18	0.14	0.10	0.070	0.031	0.018
2.9 x 3.8	2.5 x 3.4	2.2 x 2.9	1.8 x 2.4	1.2 x 1.6	0.90 x 1.2
3.8 x 5.1	3.4 x 4.5	2.9 x 3.8	2.4 x 3.2	1.6 x 2.1	1.2 x 1.6
5.3 x 7.0	4.6 x 6.2	4.0 x 5.3	3.3 x 4.4	2.2 x 2.9	1.7 x 2.2



Optical Performance - Fixed Magnification with Lower Lenses - Mini Camera Tubes

Chart 1B

		0.4X Lower Lens 35-00-11-000 WD: 490mm EFL: 500mm			0.5X Lower Lens 35-00-10-000 WD: 390mm EFL: 400mm			0.67X Lower Lens 35-00-09-000 WD: 290mm EFL: 300mm			1X Lower Lens 35-00-08-000 WD: 190mm EFL: 200mm			
Max FOV Dia		100			80			60			40			
Max Coax FOV Dia.		13			13			14			12			
1.5X Mini Camera Tube 35-08-13-000 EFL: 300mm Image Circle Dia. (mm) 36 12mm Stop	FOV (mm) Cam Format	NA	0.012			0.015			0.020			0.030		
		Res (lp/mm)	36			45			60			90		
		Mag	0.60			0.75			1.0			1.5		
		DOF (mm)	3.9			2.5			1.4			0.63		
		2/3"	11	x	15	8.8	x	12	6.6	x	8.8	4.4	x	5.9
		1"	16	x	21	13	x	17	9.6	x	13	6.4	x	8.5
		4/3"	23	x	30	18	x	24	14	x	18	9.0	x	12
		APS-C	28	x	42	22	x	33	17	x	25	11	x	17
2X Mini Camera Tube 35-08-14-000 EFL: 400mm Image Circle Dia. (mm) 44 18mm Stop	FOV (mm) Cam Format	NA	0.018			0.023			0.030			0.045		
		Res (lp/mm)	54			68			90			135		
		Mag	0.80			1.0			1.3			2.0		
		DOF (mm)	1.8			1.1			0.63			0.28		
		2/3"	8.3	x	11	6.6	x	8.8	5.0	x	6.6	3.3	x	4.4
		1"	12	x	16	9.6	x	13	7.2	x	9.6	4.8	x	6.4
		4/3"	17	x	23	14	x	18	10	x	14	6.8	x	9.0
		APS-C	21	x	31	17	x	25	13	x	19	8.4	x	13
2.5X Mini Camera Tube 35-08-15-000 EFL: 500mm Image Circle Dia. (mm) 44 18mm Stop	FOV (mm) Cam Format	NA	0.018			0.023			0.030			0.045		
		Res (lp/mm)	54			68			90			135		
		Mag	1.0			1.3			1.7			2.5		
		DOF (mm)	1.8			1.1			0.63			0.28		
		1"	9.6	x	13	7.7	x	10	5.8	x	7.7	3.8	x	5.1
		4/3"	14	x	18	11	x	14	8.1	x	11	5.4	x	7.2
		APS-C	17	x	25	13	x	20	10	x	15	6.7	x	10
		35mm (FULL)	24	x	36	19	x	29	14	x	22	9.6	x	14
3X Mini Camera Tube 35-08-16-000 EFL: 600mm Image Circle Dia. (mm) 44 18mm Stop	FOV (mm) Cam Format	NA	0.018			0.023			0.030			0.045		
		Res (lp/mm)	54			68			90			135		
		Mag	1.2			1.5			2.0			3.0		
		DOF (mm)	1.8			1.1			0.63			0.28		
		1"	8.0	x	11	6.4	x	8.5	4.8	x	6.4	3.2	x	4.3
		4/3"	11	x	15	9.0	x	12	6.8	x	9.0	4.5	x	6.0
		APS-C	14	x	21	11	x	17	8.4	x	13	5.6	x	8.4
		35mm (FULL)	20	x	30	16	x	24	12	x	18	8.0	x	12

Useable FOV Limited by Coax illumination (>50% Illumination)

FOV Limited by vignetting

	Height	x	Width	Diag.
2/3"	6.6	x	8.8	11
1"	9.6	x	12.8	16
4/3"	13.5	x	18	22.5
APS-C*	16.7	x	25.1	30
35mm (Full)	24	x	36	43.3

*Also known as Half Frame 35mm format

1.25X Lower Lens 35-00-06-000 WD: 155mm EFL: 160mm	1.43X Lower Lens 35-00-05-000 WD: 135mm EFL: 140mm	1.67 Lower Lens 35-00-04-000 WD: 110mm EFL: 120mm	2X Lower Lens 35-00-03-000 WD: 95mm EFL: 100mm	3X Lower Lens 35-00-01-000 WD: 50mm EFL: 67mm	4X Lower Lens 35-00-02-000 WD: 32mm EFL: 50mm
32	28	24	20	15	10
12	13	14	15	15	10
0.038	0.043	0.050	0.060	0.090	0.12
113	129	150	180	270	360
1.9	2.1	2.5	3.0	4.5	6.0
0.40	0.31	0.23	0.16	0.070	0.039
3.5 x 4.7	3.1 x 4.1	2.6 x 3.5	2.2 x 2.9	1.5 x 2.0	1.1 x 1.5
5.1 x 6.8	4.5 x 6.0	3.8 x 5.1	3.2 x 4.3	2.1 x 2.8	1.6 x 2.1
7.2 x 9.6	6.3 x 8.4	5.4 x 7.2	4.5 x 6.0	3.0 x 4.0	2.3 x 3.0
8.9 x 13	7.8 x 12	6.7 x 10	5.6 x 8.4	3.7 x 5.6	2.8 x 4.2
0.056	0.064	0.075	0.090	0.13	0.18
169	193	225	270	405	540
2.5	2.9	3.3	4.0	6.0	8.0
0.18	0.14	0.101	0.070	0.031	0.018
2.6 x 3.5	2.3 x 3.1	2.0 x 2.6	1.7 x 2.2	1.1 x 1.5	0.83 x 1.1
3.8 x 5.1	3.4 x 4.5	2.9 x 3.8	2.4 x 3.2	1.6 x 2.1	1.2 x 1.6
5.4 x 7.2	4.7 x 6.3	4.1 x 5.4	3.4 x 4.5	2.3 x 3.0	1.7 x 2.3
6.7 x 10	5.8 x 8.8	5.0 x 7.5	4.2 x 6.3	2.8 x 4.2	2.1 x 3.1
0.056	0.064	0.075	0.090	0.13	0.18
169	193	225	270	405	540
3.1	3.6	4.2	5.0	7.5	10
0.18	0.14	0.10	0.070	0.031	0.018
3.1 x 4.1	2.7 x 3.6	2.3 x 3.1	1.9 x 2.6	1.3 x 1.7	0.96 x 1.3
4.3 x 5.8	3.8 x 5.0	3.2 x 4.3	2.7 x 3.6	1.8 x 2.4	1.4 x 1.8
5.3 x 8.0	4.7 x 7.0	4.0 x 6.0	3.3 x 5.0	2.2 x 3.3	1.7 x 2.5
7.7 x 12	6.7 x 10	5.8 x 8.6	4.8 x 7.2	3.2 x 4.8	2.4 x 3.6
0.056	0.064	0.075	0.090	0.13	0.18
169	193	225	270	405	540
3.8	4.3	5.0	6.0	9.0	12
0.18	0.14	0.10	0.070	0.031	0.018
2.6 x 3.4	2.2 x 3.0	1.9 x 2.6	1.6 x 2.1	1.1 x 1.4	0.80 x 1.1
3.6 x 4.8	3.2 x 4.2	2.7 x 3.6	2.3 x 3.0	1.5 x 2.0	1.1 x 1.5
4.5 x 6.7	3.9 x 5.9	3.3 x 5.0	2.8 x 4.2	1.9 x 2.8	1.4 x 2.1
6.4 x 9.6	5.6 x 8.4	4.8 x 7.2	4.0 x 6.0	2.7 x 4.0	2.0 x 3.0



Optical Performance - Fixed Magnification with LWD Objectives

Chart 1C

		2X M Plan Apo 28-21-02-001 WD: 34mm			5X M Plan Apo 28-21-05-001 WD: 41mm			10X M Plan Apo 28-21-10-000 WD: 34mm			20X M Plan Apo 28-21-11-001 WD: 20mm			
Max FOV Dia.		17			16			10			5.4			
Max Coax FOV Dia.		16			11			5.0			2.6			
0.4X Camera Tube 35-08-00-000 EFL: 80mm Image Circle Dia. (mm) 9.6 NO Stop	NA	0.057			0.14			0.30			0.42			
	Res (lp/mm)	170			420			900			1260			
	Mag	0.80			2.0			4.0			8.0			
	DOF (mm)	0.18			0.029			0.0063			0.0032			
	FOV (mm) Cam Format	1/3"	4.5	x	6.0	1.8	x	2.4	0.90	x	1.2	0.45	x	0.60
		1/2"	6.0	x	8.0	2.4	x	3.2	1.2	x	1.6	0.60	x	0.80
		2/3"	8.3	x	11	3.3	x	4.4	1.7	x	2.2	0.83	x	1.1
0.5X Camera Tube 35-08-01-000 EFL: 100mm Image Circle Dia. (mm) 12 NO Stop	NA	0.057			0.14			0.30			0.42			
	Res (lp/mm)	170			420			900			1260			
	Mag	1.0			2.5			5.0			10			
	DOF (mm)	0.18			0.029			0.0063			0.0032			
	FOV (mm) Cam Format	1/3"	3.6	x	4.8	1.4	x	1.9	0.72	x	0.96	0.36	x	0.48
		1/2"	4.8	x	6.4	1.9	x	2.6	0.96	x	1.3	0.48	x	0.64
		2/3"	6.6	x	8.8	2.6	x	3.5	1.3	x	1.8	0.66	x	0.88
0.6X Camera Tube 35-08-02-000 EFL: 120mm Image Circle Dia. (mm) 14.4 NO Stop	NA	0.057			0.14			0.30			0.42			
	Res (lp/mm)	170			420			900			1260			
	Mag	1.2			3.0			6.0			12			
	DOF (mm)	0.18			0.029			0.0063			0.0032			
	FOV (mm) Cam Format	1/3"	3.0	x	4.0	1.2	x	1.6	0.60	x	0.80	0.30	x	0.40
		1/2"	4.0	x	5.3	1.6	x	2.1	0.80	x	1.1	0.40	x	0.53
		2/3"	5.5	x	7.3	2.2	x	2.9	1.1	x	1.5	0.55	x	0.73
0.8X Camera Tube 35-08-04-000 EFL: 160mm Image Circle Dia. (mm) 19.2 NO Stop	NA	0.057			0.14			0.30			0.42			
	Res (lp/mm)	170			420			900			1260			
	Mag	1.6			4.0			8.0			16			
	DOF (mm)	0.18			0.029			0.0063			0.0032			
	FOV (mm) Cam Format	1/3"	2.3	x	3.0	0.90	x	1.2	0.45	x	0.60	0.23	x	0.30
		1/2"	3.0	x	4.0	1.2	x	1.6	0.60	x	0.80	0.30	x	0.40
		2/3"	4.1	x	5.5	1.7	x	2.2	0.83	x	1.1	0.41	x	0.55
1X Camera Tube 35-08-06-000 EFL: 200mm Image Circle Dia. (mm) 24 NO Stop	NA	0.057			0.14			0.30			0.42			
	Res (lp/mm)	170			420			900			1260			
	Mag	2.0			5.0			10			20			
	DOF (mm)	0.18			0.029			0.0063			0.0032			
	FOV (mm) Cam Format	1/3"	1.8	x	2.4	0.72	x	0.96	0.36	x	0.48	0.18	x	0.24
		1/2"	2.4	x	3.2	0.96	x	1.3	0.48	x	0.64	0.24	x	0.32
		2/3"	3.3	x	4.4	1.3	x	1.8	0.66	x	0.88	0.33	x	0.44

– Useable FOV Limited by Coax illumination (>50% Illumination)

– FOV Limited by vignetting

50X M Plan Apo 28-21-50-001 WD: 13mm	5X HiRes 28-20-44-000 WD: 34mm	10X HiRes 28-20-45-000 WD: 19mm	20X HiRes 28-20-46-000 WD: 13mm
2.3	10	5.2	4.5
1.1	7.0	2.8	2.1
0.55	0.225	0.45	0.60
1650	675	1350	1800
20	2.0	4.0	8.0
0.0019	0.011	0.0028	0.0016
0.18 x 0.24	1.8 x 2.4	0.90 x 1.2	0.45 x 0.60
0.24 x 0.32	2.4 x 3.2	1.2 x 1.6	0.60 x 0.80
0.33 x 0.44	3.3 x 4.4	1.7 x 2.2	0.83 x 1.1
0.55	0.225	0.45	0.60
1650	675	1350	1800
25	2.5	5.0	10
0.0019	0.011	0.0028	0.0016
0.14 x 0.19	1.4 x 1.9	0.72 x 0.96	0.36 x 0.48
0.19 x 0.26	1.9 x 2.6	0.96 x 1.3	0.48 x 0.64
0.26 x 0.35	2.6 x 3.5	1.3 x 1.8	0.66 x 0.88
0.55	0.225	0.45	0.60
1650	675	1350	1800
30	3.0	6.0	12
0.0019	0.011	0.0028	0.0016
0.12 x 0.16	1.2 x 1.6	0.60 x 0.80	0.30 x 0.40
0.16 x 0.21	1.6 x 2.1	0.80 x 1.1	0.40 x 0.53
0.22 x 0.29	2.2 x 2.9	1.1 x 1.5	0.55 x 0.73
0.55	0.225	0.45	0.60
1650	675	1350	1800
40	4.0	8.0	16
0.0019	0.011	0.0028	0.0016
0.090 x 0.12	0.90 x 1.2	0.45 x 0.60	0.23 x 0.30
0.12 x 0.16	1.2 x 1.6	0.60 x 0.80	0.30 x 0.40
0.17 x 0.22	1.7 x 2.2	0.83 x 1.1	0.41 x 0.55
0.55	0.225	0.45	0.60
1650	675	1350	1800
50	5.0	10	20
0.0019	0.011	0.0028	0.0016
0.072 x 0.096	0.72 x 0.96	0.36 x 0.48	0.18 x 0.24
0.096 x 0.13	0.96 x 1.3	0.48 x 0.64	0.24 x 0.32
0.13 x 0.18	1.3 x 1.8	0.66 x 0.88	0.33 x 0.44

Note: Hi Res Objectives are not flat-field and therefore limited by field curvature at lower magnifications with both fixed and zoom systems.



Optical Performance – Fixed Magnification with LWD Objectives – Mini Camera Tubes

Chart 1D

		2X M Plan Apo 28-21-02-001 WD: 34mm			5X M Plan Apo 28-21-05-001 WD: 41mm			10X M Plan Apo 28-21-10-000 WD: 34mm			20X M Plan Apo 28-21-11-001 WD: 20mm			
Max FOV Dia.		17			16			10			5.4			
Max Coax FOV Dia.		16			11			5.0			2.6			
1.5X Mini Camera Tube 35-08-13-000 EFL: 300mm Image Circle Dia. (mm) 36 NO Stop	FOV (mm) Cam Format	NA	0.057			0.14			0.30			0.42		
		Res (lp/mm)	170			420			900			1260		
		Mag	3.0			7.5			15			30		
		DOF (mm)	0.18			0.029			0.0063			0.0032		
		2/3"	2.2	x	2.9	0.88	x	1.2	0.44	x	0.59	0.22	x	0.29
		1"	3.2	x	4.3	1.3	x	1.7	0.64	x	0.85	0.32	x	0.43
		4/3"	4.5	x	6.0	1.8	x	2.4	0.90	x	1.2	0.45	x	0.60
		APS-C	5.6	x	8.4	2.2	x	3.3	1.1	x	1.7	0.56	x	0.84
2X Mini Camera Tube 35-08-14-000 EFL: 400mm Image Circle Dia. (mm) 44 NO Stop	FOV (mm) Cam Format	NA	0.057			0.14			0.30			0.42		
		Res (lp/mm)	170			420			900			1260		
		Mag	4.0			10			20			40		
		DOF (mm)	0.18			0.029			0.0063			0.0032		
		2/3"	1.7	x	2.2	0.66	x	0.88	0.33	x	0.44	0.17	x	0.22
		1"	2.4	x	3.2	0.96	x	1.3	0.48	x	0.64	0.24	x	0.32
		4/3"	3.4	x	4.5	1.4	x	1.8	0.68	x	0.90	0.34	x	0.45
		APS-C	4.2	x	6.3	1.7	x	2.5	0.84	x	1.3	0.42	x	0.63
2.5X Mini Camera Tube 35-08-15-000 EFL: 500mm Image Circle Dia. (mm) 44 NO Stop	FOV (mm) Cam Format	NA	0.057			0.14			0.30			0.42		
		Res (lp/mm)	170			420			900			1260		
		Mag	5.0			12.5			25			50		
		DOF (mm)	0.18			0.029			0.0063			0.0032		
		1"	1.9	x	2.6	0.77	x	1.0	0.38	x	0.51	0.19	x	0.26
		4/3"	2.7	x	3.6	1.1	x	1.4	0.54	x	0.72	0.27	x	0.36
		APS-C	3.3	x	5.0	1.3	x	2.0	0.67	x	1.0	0.33	x	0.50
		35mm(Full)	4.8	x	7.2	1.9	x	2.9	1.0	x	1.4	0.48	x	0.72
3X Mini Camera Tube 35-08-16-000 EFL: 600mm Image Circle Dia. (mm) 44 NO Stop	FOV (mm) Cam Format	NA	0.057			0.14			0.30			0.42		
		Res (lp/mm)	170			420			900			1260		
		Mag	6.0			15			30			60		
		DOF (mm)	0.18			0.029			0.0063			0.0032		
		1"	1.6	x	2.1	0.64	x	0.85	0.32	x	0.43	0.16	x	0.21
		4/3"	2.3	x	3.0	0.90	x	1.2	0.45	x	0.60	0.23	x	0.30
		APS-C	2.8	x	4.2	1.1	x	1.7	0.56	x	0.84	0.28	x	0.42
		35mm(Full)	4.0	x	6.0	1.6	x	2.4	0.80	x	1.2	0.40	x	0.60

– Useable FOV Limited by Coax illumination (>50% Illumination)

– FOV Limited by vignetting

	Height	x	Width	Diag.
2/3"	6.6	x	8.8	11
1"	9.6	x	12.8	16
4/3"	13.5	x	18	22.5
APS-C*	16.7	x	25.1	30
35mm (Full)	24	x	36	43.3

*Also known as Half Frame 35mm format

50X M Plan Apo 28-21-50-001 WD: 13mm	5X HiRes 28-20-44-000 WD: 34mm	10X HiRes 28-20-45-000 WD: 19mm	20X HiRes 28-20-46-000 WD: 13mm
2.3	10	5.2	4.5
1.1	7.0	2.8	2.1
0.55	0.225	0.45	0.60
1650	675	1350	1800
75	7.5	15	30
0.0019	0.011	0.0028	0.0016
0.088 x 0.12	0.88 x 1.2	0.44 x 0.59	0.22 x 0.29
0.13 x 0.17	1.3 x 1.7	0.64 x 0.85	0.32 x 0.43
0.18 x 0.24	1.8 x 2.4	0.90 x 1.2	0.45 x 0.60
0.22 x 0.33	2.2 x 3.3	1.1 x 1.7	0.56 x 0.84
0.55	0.225	0.45	0.60
1650	675	1350	1800
100	10	20	40
0.0019	0.011	0.0028	0.0016
0.066 x 0.088	0.66 x 0.88	0.33 x 0.44	0.17 x 0.22
0.096 x 0.13	0.96 x 1.3	0.48 x 0.64	0.24 x 0.32
0.14 x 0.18	1.4 x 1.8	0.68 x 0.90	0.34 x 0.45
0.17 x 0.25	1.7 x 2.5	0.84 x 1.3	0.42 x 0.63
0.55	0.225	0.45	0.60
1650	675	1350	1800
125	12.5	25	50
0.0019	0.011	0.0028	0.0016
0.08 x 0.10	0.77 x 1.0	0.38 x 0.51	0.19 x 0.26
0.11 x 0.14	1.1 x 1.4	0.54 x 0.72	0.27 x 0.36
0.13 x 0.20	1.3 x 2.0	0.67 x 1.0	0.33 x 0.50
0.19 x 0.29	1.9 x 2.9	0.96 x 1.4	0.48 x 0.72
0.55	0.225	0.45	0.60
1650	675	1350	1800
150	15	30	60
0.0019	0.011	0.0028	0.0016
0.064 x 0.085	0.64 x 0.85	0.32 x 0.43	0.16 x 0.21
0.090 x 0.12	0.90 x 1.2	0.45 x 0.60	0.23 x 0.30
0.11 x 0.17	1.1 x 1.7	0.56 x 0.84	0.28 x 0.42
0.16 x 0.24	1.6 x 2.4	0.80 x 1.2	0.40 x 0.60

Note: Hi Res Objectives are not flat-field and therefore limited by field curvature at lower magnifications with both fixed and zoom systems.



Optical Performance - OPTEM 7:1 Zoom with Lower Lens

Chart 2A

		0.4X Lower Lens 35-00-11-000 WD: 490mm EFL: 500mm		0.5X Lower Lens 35-00-10-000 WD: 390mm EFL: 400mm		0.67X Lower Lens 35-00-09-000 WD: 290mm EFL: 300mm		1X Lower Lens 35-00-08-000 WD: 190mm EFL: 200mm										
Max FOV Dia.		156		125		94		63										
Max Coax FOV Dia.		NR		NR		NR		19										
0.4X Camera Tube 35-08-00-000 EFL: 80mm Image Circle Dia. (mm) 9.6	Low Mag		High Mag		Low Mag		High Mag		Low Mag		High Mag							
	NA		0.0047		0.016		0.0059		0.019		0.0079		0.026		0.012		0.039	
	Res (lp/mm)		14		47		18		58		24		78		35		116	
	Mag		0.067		0.46		0.084		0.58		0.11		0.77		0.17		1.2	
	DOF (mm)		25		2.4		16		1.5		9.2		0.85		4.1		0.38	
	FOV (mm) Cam Format	1/3"	54 x 71		7.8 x 10		43 x 57		6.2 x 8.3		32 x 43		4.7 x 6.2		21 x 29		3.1 x 4.1	
		1/2"	71 x 95		10 x 14		57 x 76		8.3 x 11		43 x 57		6.2 x 8.3		29 x 38		4.1 x 5.5	
		2/3"	98 x 131		14 x 19		79 x 105		11 x 15		59 x 79		8.5 x 11		39 x 52		5.7 x 7.6	
0.5X Camera Tube 35-08-01-000 EFL: 100mm Image Circle Dia. (mm) 12	NA		0.0047		0.016		0.0059		0.019		0.0079		0.026		0.012		0.039	
	Res (lp/mm)		14		47		18		58		24		78		35		116	
	Mag		0.084		0.58		0.11		0.73		0.14		0.97		0.21		1.5	
	DOF (mm)		25		2.4		16		1.5		9.2		0.85		4.1		0.38	
	FOV (mm) Cam Format	1/3"	43 x 57		6.2 x 8.3		34 x 46		5.0 x 6.6		26 x 34		3.7 x 5.0		17 x 23		2.5 x 3.3	
		1/2"	57 x 76		8.3 x 11		46 x 61		6.6 x 8.8		34 x 46		5.0 x 6.6		23 x 30		3.3 x 4.4	
		2/3"	79 x 105		11 x 15		63 x 84		9.1 x 12		47 x 63		6.8 x 9.1		31 x 42		4.6 x 6.1	
	0.6X Camera Tube 35-08-02-000 EFL: 120mm Image Circle Dia. (mm) 14.4	NA		0.0047		0.016		0.0059		0.019		0.0079		0.026		0.012		0.039
Res (lp/mm)		14		47		18		58		24		78		35		116		
Mag		0.10		0.70		0.13		0.87		0.17		1.2		0.25		1.7		
DOF (mm)		25		2.4		16		1.5		9.2		0.85		4.1		0.38		
FOV (mm) Cam Format		1/3"	36 x 48		5.2 x 6.9		29 x 38		4.1 x 5.5		21 x 29		3.1 x 4.1		14 x 19		2.1 x 2.8	
		1/2"	48 x 63		6.9 x 9.2		38 x 51		5.5 x 7.4		29 x 38		4.1 x 5.5		19 x 25		2.8 x 3.7	
		2/3"	65 x 87		9.5 x 13		52 x 70		7.6 x 10		39 x 52		5.7 x 7.6		26 x 35		3.8 x 5.1	
0.8X Camera Tube 35-08-04-000 EFL: 160mm Image Circle Dia. (mm) 19.2		NA		0.0047		0.016		0.0059		0.019		0.0079		0.026		0.012		0.039
	Res (lp/mm)		14		47		18		58		24		78		35		116	
	Mag		0.13		0.93		0.17		1.2		0.22		1.5		0.34		2.3	
	DOF (mm)		25		2.4		16		1.5		9.2		0.85		4.1		0.38	
	FOV (mm) Cam Format	1/3"	27 x 36		3.9 x 5.2		21 x 29		3.1 x 4.1		16 x 21		2.3 x 3.1		11 x 14		1.6 x 2.1	
		1/2"	36 x 48		5.2 x 6.9		29 x 38		4.1 x 5.5		21 x 29		3.1 x 4.1		14 x 19		2.1 x 2.8	
		2/3"	49 x 65		7.1 x 9.5		39 x 52		5.7 x 7.6		29 x 39		4.3 x 5.7		20 x 26		2.8 x 3.8	
	1X Camera Tube 35-08-06-000 EFL: 200mm Image Circle Dia. (mm) 24	NA		0.0047		0.016		0.0059		0.019		0.0079		0.026		0.012		0.039
Res (lp/mm)		14		47		18		58		24		78		35		116		
Mag		0.17		1.2		0.21		1.5		0.28		1.9		0.42		2.9		
DOF (mm)		25		2.4		16		1.5		9.2		0.85		4.1		0.38		
FOV (mm) Cam Format		1/3"	21 x 29		3.1 x 4.1		17 x 23		2.5 x 3.3		13 x 17		1.9 x 2.5		8.6 x 11		1.2 x 1.7	
		1/2"	29 x 38		4.1 x 5.5		23 x 30		3.3 x 4.4		17 x 23		2.5 x 3.3		11 x 15		1.7 x 2.2	
		2/3"	39 x 52		5.7 x 7.6		31 x 42		4.6 x 6.1		24 x 31		3.4 x 4.6		16 x 21		2.3 x 3.0	

 – Useable FOV Limited by Coax illumination (>50% Illumination)
 – FOV Limited by vignetting
NR = Not recommended for Coax illumination

1.25X Lower Lens 35-00-06-000 WD: 155mm EFL: 160mm		1.43X Lower Lens 35-00-05-000 WD: 135mm EFL: 140mm		1.67 Lower Lens 35-00-04-000 WD: 110mm EFL: 120mm		2X Lower Lens 35-00-03-000 WD: 95mm EFL: 100mm		3X Lower Lens 35-00-01-000 WD: 50mm EFL: 67mm		4X Lower Lens 35-00-02-000 WD: 32mm EFL: 50mm	
50		44		38		31		21		16	
19		19		18		19		13		9.4	
Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag
0.015	0.048	0.017	0.055	0.020	0.065	0.024	0.078	0.035	0.12	0.047	0.16
44	145	51	166	59	194	71	233	106	349	142	465
0.21	1.5	0.24	1.7	0.28	1.9	0.34	2.3	0.50	3.5	0.67	4.6
2.6	0.24	2.0	0.19	1.5	0.14	1.0	0.094	0.45	0.042	0.25	0.024
17 x 23	2.5 x 3.3	15 x 20	2.2 x 2.9	13 x 17	1.9 x 2.5	11 x 14	1.6 x 2.1	7.1 x 9.5	1.0 x 1.4	5.4 x 7.1	0.78 x 1.0
23 x 30	3.3 x 4.4	20 x 27	2.9 x 3.9	17 x 23	2.5 x 3.3	14 x 19	2.1 x 2.8	9.5 x 13	1.4 x 1.8	7.1 x 10	1.0 x 1.4
31 x 42	4.6 x 6.1	28 x 37	4.0 x 5.3	24 x 31	3.4 x 4.6	20 x 26	2.8 x 3.8	13 x 17	1.9 x 2.5	10 x 13	1.4 x 1.9
0.015	0.048	0.017	0.055	0.020	0.065	0.024	0.078	0.035	0.12	0.047	0.16
44	145	51	166	59	194	71	233	106	349	142	465
0.26	1.8	0.30	2.1	0.35	2.4	0.42	2.9	0.63	4.3	0.84	5.8
2.6	0.24	2.0	0.19	1.5	0.14	1.0	0.094	0.45	0.042	0.25	0.024
14 x 18	2.0 x 2.6	12 x 16	1.7 x 2.3	10 x 14	1.5 x 2.0	8.6 x 11	1.24 x 1.7	5.7 x 7.6	0.83 x 1.1	4.3 x 5.7	0.62 x 0.83
18 x 24	2.6 x 3.5	16 x 21	2.3 x 3.1	14 x 18	2.0 x 2.6	11 x 15	1.7 x 2.2	7.6 x 10	1.1 x 1.5	5.7 x 7.6	0.83 x 1.1
25 x 34	3.6 x 4.9	22 x 29	3.2 x 4.2	19 x 25	2.7 x 3.6	16 x 21	2.3 x 3.0	10 x 14	1.5 x 2.0	7.9 x 10	1.1 x 1.5
0.015	0.048	0.017	0.055	0.020	0.065	0.024	0.078	0.035	0.12	0.047	0.16
44	145	51	166	59	194	71	233	106	349	142	465
0.32	2.2	0.36	2.5	0.42	2.9	0.50	3.5	0.76	5.2	1.0	7.0
2.6	0.24	2.0	0.19	1.5	0.14	1.0	0.094	0.45	0.042	0.25	0.024
11 x 15	1.7 x 2.2	10 x 13	1.4 x 1.9	8.6 x 11	1.2 x 1.7	7.1 x 9.5	1.0 x 1.4	4.8 x 6.4	0.69 x 0.92	3.6 x 4.8	0.52 x 0.69
15 x 20	2.2 x 2.9	13 x 18	1.9 x 2.6	11 x 15	1.7 x 2.2	9.5 x 13	1.4 x 1.8	6.4 x 8.5	0.92 x 1.2	4.8 x 6.3	0.69 x 0.92
21 x 28	3.0 x 4.0	18 x 24	2.7 x 3.5	16 x 21	2.3 x 3.0	13 x 17	1.9 x 2.5	8.7 x 12	1.3 x 1.7	6.5 x 8.7	0.95 x 1.3
0.015	0.048	0.017	0.055	0.020	0.065	0.024	0.078	0.035	0.12	0.047	0.16
44	145	51	166	59	194	71	233	106	349	142	465
0.42	2.9	0.48	3.3	0.56	3.9	0.67	4.6	1.0	7.0	1.3	9.3
2.6	0.24	2.0	0.19	1.5	0.14	1.0	0.094	0.45	0.042	0.25	0.024
8.6 x 11	1.2 x 1.7	7.5 x 10	1.1 x 1.4	6.4 x 8.6	0.93 x 1.2	5.4 x 7.1	0.78 x 1.0	3.6 x 4.8	0.52 x 0.69	2.7 x 3.6	0.39 x 0.52
11 x 15	1.7 x 2.2	10 x 13	1.4 x 1.9	8.6 x 11	1.2 x 1.7	7.1 x 9.5	1.0 x 1.4	4.8 x 6.4	0.69 x 0.92	3.6 x 4.8	0.52 x 0.69
16 x 21	2.3 x 3.0	14 x 18	2.0 x 2.7	12 x 16	1.7 x 2.3	9.8 x 13	1.4 x 1.9	6.6 x 8.7	0.95 x 1.3	4.9 x 6.5	0.71 x 0.95
0.015	0.048	0.017	0.055	0.020	0.065	0.024	0.078	0.035	0.12	0.047	0.16
44	145	51	166	59	194	71	233	106	349	142	465
0.53	3.6	0.60	4.1	0.70	4.8	0.84	5.8	1.3	8.7	1.7	12
2.6	0.24	2.0	0.19	1.5	0.14	1.0	0.094	0.45	0.042	0.25	0.024
6.9 x 9.1	0.99 x 1.3	6.0 x 8.0	0.87 x 1.2	5.1 x 6.9	0.74 x 0.99	4.3 x 5.7	0.62 x 0.83	2.9 x 3.8	0.41 x 0.55	2.1 x 2.9	0.31 x 0.41
9.1 x 12	1.3 x 1.8	8.0 x 11	1.2 x 1.5	6.9 x 9.1	0.99 x 1.3	5.7 x 7.6	0.83 x 1.1	3.8 x 5.1	0.55 x 0.74	2.9 x 3.8	0.41 x 0.55
13 x 17	1.8 x 2.4	11 x 15	1.6 x 2.1	9.4 x 13	1.4 x 1.8	7.9 x 10	1.1 x 1.5	5.2 x 7.0	0.76 x 1.0	3.9 x 5.2	0.57 x 0.76



Optical Performance - OPTEM 7:1 Zoom with Lower Lens - Mini Camera Tubes

Chart 2B

		0.4X Lower Lens 35-00-11-000 WD: 490mm EFL: 500mm		0.5X Lower Lens 35-00-10-000 WD: 390mm EFL: 400mm		0.67X Lower Lens 35-00-09-000 WD: 290mm EFL: 300mm		1X Lower Lens 35-00-08-000 WD: 190mm EFL: 200mm	
Max FOV Dia.		156		125		94		63	
Max Coax FOV Dia.		NR		NR		NR		19	
		Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag
1.5X Mini Camera Tube 35-08-13-000 EFL: 300mm Image Circle Dia. (mm) 36	NA Res (lp/mm) Mag DOF (mm)	0.0047	0.016	0.0059	0.019	0.0079	0.026	0.012	0.039
		14	47	18	58	24	78	35	116
		0.25	1.7	0.32	2.2	0.42	2.9	0.63	4.4
		25	2.4	16	1.5	9.2	0.85	4.1	0.38
	FOV (mm) Cam Format 2/3" 1" 4/3" APS-C	26 x 35	3.8 x 5.1	21 x 28	3.0 x 4.0	16 x 21	2.3 x 3.0	10 x 14	1.5 x 2.0
		38 x 51	5.5 x 7.4	30 x 41	4.4 x 5.9	23 x 30	3.3 x 4.4	15 x 20	2.2 x 2.9
		54 x 71	7.8 x 10	43 x 57	6.2 x 8.3	32 x 43	4.7 x 6.2	21 x 29	3.1 x 4.1
		66 x 100	10 x 14	53 x 80	7.7 x 12	40 x 60	5.8 x 8.7	27 x 40	3.8 x 5.8
	NA Res (lp/mm) Mag DOF (mm)	0.0047	0.016	0.0059	0.019	0.0079	0.026	0.012	0.039
		14	47	18	58	24	78	35	116
		0.34	2.3	0.42	2.9	0.56	3.9	0.84	5.8
		25	2.4	16	1.5	9.2	0.85	4.1	0.38
2X Mini Camera Tube 35-08-14-000 EFL: 400mm Image Circle Dia. (mm) 44	NA Res (lp/mm) Mag DOF (mm)	0.0047	0.016	0.0059	0.019	0.0079	0.026	0.012	0.039
		14	47	18	58	24	78	35	116
		0.34	2.3	0.42	2.9	0.56	3.9	0.84	5.8
		25	2.4	16	1.5	9.2	0.85	4.1	0.38
	FOV (mm) Cam Format 2/3" 1" 4/3" APS-C	20 x 26	2.8 x 3.8	16 x 21	2.3 x 3.0	12 x 16	1.7 x 2.3	7.9 x 10	1.1 x 1.5
		29 x 38	4.1 x 5.5	23 x 30	3.3 x 4.4	17 x 23	2.5 x 3.3	11 x 15	1.7 x 2.2
		40 x 54	5.8 x 7.8	32 x 43	4.7 x 6.2	24 x 32	3.5 x 4.7	16 x 21	2.3 x 3.1
		50 x 75	7.2 x 11	40 x 60	5.8 x 8.7	30 x 45	4.3 x 6.5	20 x 30	2.9 x 4.3
	NA Res (lp/mm) Mag DOF (mm)	0.0047	0.016	0.0059	0.019	0.0079	0.026	0.012	0.039
		14	47	18	58	24	78	35	116
		0.42	2.9	0.53	3.6	0.70	4.8	1.1	7.3
		25	2.4	16	1.5	9.2	0.85	4.1	0.38
2.5X Mini Camera Tube 35-08-15-000 EFL: 500mm Image Circle Dia. (mm) 44	NA Res (lp/mm) Mag DOF (mm)	0.0047	0.016	0.0059	0.019	0.0079	0.026	0.012	0.039
		14	47	18	58	24	78	35	116
		0.42	2.9	0.53	3.6	0.70	4.8	1.1	7.3
		25	2.4	16	1.5	9.2	0.85	4.1	0.38
	FOV (mm) Cam Format 1" 4/3" APS-C 35mm(Full)	23 x 30	3.3 x 4.4	18 x 24	2.6 x 3.5	14 x 18	2.0 x 2.6	9.1 x 12	1.3 x 1.8
		32 x 43	4.7 x 6.2	26 x 34	3.7 x 5.0	19 x 26	2.8 x 3.7	13 x 17	1.9 x 2.5
		40 x 60	5.8 x 8.7	32 x 48	4.6 x 6.9	24 x 36	3.5 x 5.2	16 x 24	2.3 x 3.5
		57 x 86	8.3 x 12	46 x 69	6.6 x 9.9	34 x 51	5.0 x 7.4	23 x 34	3.3 x 5.0
	NA Res (lp/mm) Mag DOF (mm)	0.0047	0.016	0.0059	0.019	0.0079	0.026	0.012	0.039
		14	47	18	58	24	78	35	116
		0.50	3.5	0.63	4.4	0.84	5.8	1.3	8.7
		25	2.4	16	1.5	9.2	0.85	4.1	0.38
3X Mini Camera Tube 35-08-16-000 EFL: 600mm Image Circle Dia. (mm) 44	NA Res (lp/mm) Mag DOF (mm)	0.0047	0.016	0.0059	0.019	0.0079	0.026	0.012	0.039
		14	47	18	58	24	78	35	116
		0.50	3.5	0.63	4.4	0.84	5.8	1.3	8.7
		25	2.4	16	1.5	9.2	0.85	4.1	0.38
	FOV (mm) Cam Format 1" 4/3" APS-C 35mm(Full)	19 x 25	2.8 x 3.7	15 x 20	2.2 x 2.9	11 x 15	1.7 x 2.2	7.6 x 10	1.1 x 1.5
		27 x 36	3.9 x 5.2	21 x 29	3.1 x 4.1	16 x 21	2.3 x 3.1	11 x 14	1.6 x 2.1
		33 x 50	4.8 x 7.2	27 x 40	3.8 x 5.8	20 x 30	2.9 x 4.3	13 x 20	1.9 x 2.9
		48 x 71	6.9 x 10	38 x 57	5.5 x 8.3	29 x 43	4.1 x 6.2	19 x 29	2.8 x 4.1

Useable FOV Limited by Coax illumination (>50% Illumination)

FOV Limited by vignetting

NR = Not recommended for Coax illumination

	Height	x	Width	Diag.
2/3"	6.6	x	8.8	11
1"	9.6	x	12.8	16
4/3"	13.5	x	18	22.5
APS-C*	16.7	x	25.1	30
35mm (Full)	24	x	36	43.3

*Also known as Half Frame 35mm format

1.25X Lower Lens 35-00-06-000 WD: 155mm EFL: 160mm		1.43X Lower Lens 35-00-05-000 WD: 135mm EFL: 140mm		1.67 Lower Lens 35-00-04-000 WD: 110mm EFL: 120mm		2X Lower Lens 35-00-03-000 WD: 95mm EFL: 100mm		3X Lower Lens 35-00-01-000 WD: 50mm EFL: 67mm		4X Lower Lens 35-00-02-000 WD: 32mm EFL: 50mm	
50		44		38		31		21		16	
19		19		18		19		13		9.4	
Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag
0.015	0.048	0.017	0.055	0.020	0.065	0.024	0.078	0.035	0.12	0.047	0.16
44	145	51	166	59	194	71	233	106	349	142	465
0.79	5.4	0.90	6.2	1.1	7.3	1.3	8.7	1.9	13	2.5	17
2.6	0.24	2.0	0.19	1.5	0.14	1.0	0.094	0.45	0.042	0.25	0.024
8.4 x 11	12 x 1.6	7.3 x 10	1.1 x 1.4	6.3 x 8.4	0.91 x 1.2	5.2 x 7.0	0.76 x 1.0	3.5 x 4.7	0.51 x 0.67	2.6 x 3.5	0.38 x 0.51
12 x 16	1.8 x 2.4	11 x 14	1.5 x 2.1	9.1 x 12	1.3 x 1.8	7.6 x 10	1.1 x 1.5	5.1 x 6.8	0.74 x 0.98	3.8 x 5.1	0.55 x 0.74
17 x 23	2.5 x 3.3	15 x 20	2.2 x 2.9	13 x 17	1.9 x 2.5	11 x 14	1.6 x 2.1	7.1 x 9.5	1.0 x 1.4	5.4 x 7.1	0.78 x 1.0
21 x 32	3.1 x 4.6	19 x 28	2.7 x 4.0	16 x 24	2.3 x 3.5	13 x 20	1.9 x 2.9	8.8 x 13	1.3 x 1.9	6.6 x 10	0.96 x 1.4
0.015	0.048	0.017	0.055	0.020	0.065	0.024	0.078	0.035	0.12	0.047	0.16
44	145	51	166	59	194	71	233	106	349	142	465
1.1	7.3	1.2	8.3	1.4	9.7	1.7	12	2.5	17	3.4	23
2.6	0.24	2.0	0.19	1.5	0.14	1.0	0.094	0.45	0.042	0.25	0.024
6.3 x 8.4	0.91 x 1.2	5.5 x 7.3	0.80 x 1.1	4.7 x 6.3	0.68 x 0.91	3.9 x 5.2	0.57 x 0.76	2.6 x 3.5	0.38 x 0.51	2.0 x 2.6	0.28 x 0.38
9.1 x 12	1.3 x 1.8	8.0 x 11	1.2 x 1.5	6.9 x 9.1	0.99 x 1.3	5.7 x 7.6	0.83 x 1.1	3.8 x 5.1	0.55 x 0.74	2.9 x 3.8	0.41 x 0.55
13 x 17	1.9 x 2.5	11 x 15	1.6 x 2.2	9.6 x 13	1.4 x 1.9	8.0 x 11	1.2 x 1.6	5.4 x 7.1	0.78 x 1.0	4.0 x 5.4	0.58 x 0.78
16 x 24	2.3 x 3.5	14 x 21	2.0 x 3.0	12 x 18	1.7 x 2.6	9.9 x 15	1.4 x 2.2	6.6 x 10	0.96 x 1.4	5.0 x 7.5	0.72 x 1.1
0.015	0.048	0.017	0.055	0.020	0.065	0.024	0.078	0.035	0.12	0.047	0.16
44	145	51	166	59	194	71	233	106	349	142	465
1.3	9.1	1.5	10	1.8	12	2.1	15	3.1	22	4.2	29
2.6	0.24	2.0	0.19	1.5	0.14	1.0	0.094	0.45	0.042	0.25	0.024
7.3 x 9.8	1.1 x 1.4	6.4 x 8.5	0.93 x 1.2	5.5 x 7.3	0.79 x 1.1	4.6 x 6.1	0.66 x 0.88	3.0 x 4.1	0.44 x 0.59	2.3 x 3.0	0.33 x 0.44
10 x 14	1.5 x 2.0	9.0 x 12	1.3 x 1.7	7.7 x 10	1.1 x 1.5	6.4 x 8.6	0.93 x 1.2	4.3 x 5.7	0.62 x 0.83	3.2 x 4.3	0.47 x 0.62
13 x 19	1.8 x 2.8	11 x 17	1.6 x 2.4	9.5 x 14	1.4 x 2.1	8.0 x 12	1.2 x 1.7	5.3 x 8.0	0.77 x 1.2	4.0 x 6.0	0.58 x 0.87
18 x 27	2.6 x 4.0	16 x 24	2.3 x 3.5	14 x 21	2.0 x 3.0	11 x 17	1.7 x 2.5	7.6 x 11	1.1 x 1.7	5.7 x 8.6	0.83 x 1.2
0.015	0.048	0.017	0.055	0.020	0.065	0.024	0.078	0.035	0.12	0.047	0.16
44	145	51	166	59	194	71	233	106	349	142	465
1.6	11	1.8	12	2.1	15	2.5	17	3.8	26	5.0	35
2.6	0.24	2.0	0.19	1.5	0.14	1.0	0.094	0.45	0.042	0.25	0.024
6.1 x 8.1	0.88 x 1.2	5.3 x 7.1	0.77 x 1.0	4.6 x 6.1	0.66 x 0.88	3.8 x 5.1	0.55 x 0.74	2.5 x 3.4	0.37 x 0.49	1.9 x 2.5	0.28 x 0.37
8.6 x 11	1.2 x 1.7	7.5 x 10	1.1 x 1.4	6.4 x 8.6	0.93 x 1.2	5.4 x 7.1	0.78 x 1.0	3.6 x 4.8	0.52 x 0.69	2.7 x 3.6	0.39 x 0.52
11 x 16	1.5 x 2.3	9.3 x 14	1.3 x 2.0	8.0 x 12	1.2 x 1.7	6.6 x 10	0.96 x 1.4	4.4 x 6.6	0.64 x 0.96	3.3 x 5.0	0.48 x 0.72
15 x 23	2.2 x 3.3	13 x 20	1.9 x 2.9	11 x 17	1.7 x 2.5	9.5 x 14	1.4 x 2.1	6.4 x 9.5	0.92 x 1.4	4.8 x 7.1	0.69 x 1.0



Optical Performance - OPTEM 7:1 Zoom with LWD Objectives

Chart 2C

		2X M Plan Apo 28-21-02-001 WD: 34mm			5X M Plan Apo 28-21-05-001 WD: 41mm			10X M Plan Apo 28-21-10-000 WD: 34mm												
Max FOV Dia.		14			6.9			3.2												
Max Coax FOV Dia.		11			6.5			2.2												
0.4X Camera Tube 35-08-00-000 EFL: 80mm Image Circle Dia. (mm) 9.6		Low Mag		High Mag		Low Mag		High Mag		Low Mag		High Mag								
		NA		0.024		0.057		0.059		0.14		0.12		0.30						
		Res (lp/mm)		71		170		177		420		354		900						
		Mag		0.34		2.3		0.84		5.8		1.7		12						
	DOF (mm)		1.0		0.18		0.16		0.029		0.041		0.0063							
	FOV (mm) Cam Format	1/3"	11	x	14	1.6	x	2.1	4.3	x	5.7	0.62	x	0.83	2.1	x	2.9	0.31	x	0.41
		1/2"	14	x	19	2.1	x	2.8	5.7	x	7.6	0.83	x	1.1	2.9	x	3.8	0.41	x	0.55
		2/3"	20	x	26	2.8	x	3.8	7.9	x	10	1.1	x	1.5	3.9	x	5.2	0.57	x	0.76
0.5X Camera Tube 35-08-01-000 EFL: 100mm Image Circle Dia. (mm) 12		NA		0.024		0.057		0.059		0.14		0.12		0.30						
		Res (lp/mm)		71		170		177		420		354		900						
		Mag		0.42		2.9		1.1		7.3		2.1		15						
		DOF (mm)		1.0		0.18		0.16		0.029		0.041		0.0063						
	FOV (mm) Cam Format	1/3"	8.6	x	11	1.2	x	1.7	3.4	x	4.6	0.50	x	0.66	1.7	x	2.3	0.25	x	0.33
		1/2"	11	x	15	1.7	x	2.2	4.6	x	6.1	0.66	x	0.88	2.3	x	3.0	0.33	x	0.44
		2/3"	16	x	21	2.3	x	3.0	6.3	x	8.4	0.91	x	1.2	3.1	x	4.2	0.46	x	0.61
	0.6X Camera Tube 35-08-02-000 EFL: 120mm Image Circle Dia. (mm) 14.4		NA		0.024		0.057		0.059		0.14		0.12		0.30					
Res (lp/mm)			71		170		177		420		354		900							
Mag			0.50		3.5		1.3		8.7		2.5		17							
DOF (mm)			1.0		0.18		0.16		0.029		0.041		0.0063							
FOV (mm) Cam Format		1/3"	7.1	x	9.5	1.0	x	1.4	2.9	x	3.8	0.41	x	0.55	1.4	x	1.9	0.21	x	0.28
		1/2"	9.5	x	13	1.4	x	1.8	3.8	x	5.1	0.55	x	0.74	1.9	x	2.5	0.28	x	0.37
		2/3"	13	x	17	1.9	x	2.5	5.2	x	7.0	0.76	x	1.0	2.6	x	3.5	0.38	x	0.51
0.8X Camera Tube 35-08-04-000 EFL: 160mm Image Circle Dia. (mm) 19.2			NA		0.024		0.057		0.059		0.14		0.12		0.30					
	Res (lp/mm)		71		170		177		420		354		900							
	Mag		0.67		4.6		1.7		12		3.4		23							
	DOF (mm)		1.0		0.18		0.16		0.029		0.041		0.0063							
	FOV (mm) Cam Format	1/3"	5.4	x	7.1	0.78	x	1.0	2.1	x	2.9	0.31	x	0.41	1.1	x	1.4	0.16	x	0.21
		1/2"	7.1	x	9.5	1.0	x	1.4	2.9	x	3.8	0.41	x	0.55	1.4	x	1.9	0.21	x	0.28
		2/3"	9.8	x	13	1.4	x	1.9	3.9	x	5.2	0.57	x	0.76	2.0	x	2.6	0.28	x	0.38
	1X Camera Tube 35-08-06-000 EFL: 200mm Image Circle Dia. (mm) 24		NA		0.024		0.057		0.059		0.14		0.12		0.30					
Res (lp/mm)			71		170		177		420		354		900							
Mag			0.84		5.8		2.1		15		4.2		29							
DOF (mm)			1.0		0.18		0.16		0.029		0.041		0.0063							
FOV (mm) Cam Format		1/3"	4.3	x	5.7	0.62	x	0.83	1.7	x	2.3	0.25	x	0.33	0.86	x	1.1	0.12	x	0.17
		1/2"	5.7	x	7.6	0.83	x	1.1	2.3	x	3.0	0.33	x	0.44	1.1	x	1.5	0.17	x	0.22
		2/3"	7.9	x	10	1.1	x	1.5	3.1	x	4.2	0.46	x	0.61	1.6	x	2.1	0.23	x	0.30

– Useable FOV Limited by Coax illumination (>50% Illumination)

– FOV Limited by vignetting

50X M Plan Apo is NOT recommended for use with a 7:1 Zoom
0.4X and 0.5X Camera Tubes are not recommended for use with
a 7:1 Zoom and Microscope Objectives.

20X M Plan Apo 28-21-11-001 WD: 20mm		5X HiRes 28-20-44-000 WD: 34mm		10X HiRes 28-20-45-000 WD: 19mm		20X HiRes 28-20-46-000 WD: 13mm	
1.2		6.4		3.1		1.7	
0.83		4.9		2.2		1.1	
Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag
0.24	0.42	0.059	0.19	0.12	0.39	0.24	0.60
708	1260	177	581	354	1163	708	1800
3.4	23	0.84	5.8	1.7	12	3.4	23
0.010	0.0032	0.16	0.015	0.041	0.0038	0.010	0.00158
1.1 x 14	0.16 x 0.21	4.3 x 5.7	0.62 x 0.83	2.1 x 2.9	0.31 x 0.41	1.1 x 14	0.16 x 0.21
14 x 19	0.21 x 0.28	5.7 x 7.6	0.83 x 1.1	2.9 x 3.8	0.41 x 0.55	1.4 x 19	0.21 x 0.28
2.0 x 2.6	0.28 x 0.38	7.9 x 10	1.1 x 1.5	3.9 x 5.2	0.57 x 0.76	2.0 x 2.6	0.28 x 0.38
0.24	0.42	0.059	0.19	0.12	0.39	0.24	0.60
708	1260	177	581	354	1163	708	1800
4.2	29	1.1	7.3	2.1	15	4.2	29
0.010	0.0032	0.16	0.015	0.041	0.0038	0.010	0.00158
0.86 x 1.1	0.12 x 0.17	3.4 x 4.6	0.50 x 0.66	1.7 x 2.3	0.25 x 0.33	0.9 x 1.1	0.12 x 0.17
1.1 x 1.5	0.17 x 0.22	4.6 x 6.1	0.66 x 0.88	2.3 x 3.0	0.33 x 0.44	1.1 x 1.5	0.17 x 0.22
1.6 x 2.1	0.23 x 0.30	6.3 x 8.4	0.91 x 1.2	3.1 x 4.2	0.46 x 0.61	1.6 x 2.1	0.23 x 0.30
0.24	0.42	0.059	0.19	0.12	0.39	0.24	0.60
708	1260	177	581	354	1163	708	1800
5.0	35	1.3	8.7	2.5	17	5.0	35
0.010	0.0032	0.16	0.015	0.041	0.0038	0.010	0.00158
0.71 x 0.95	0.10 x 0.14	2.9 x 3.8	0.41 x 0.55	1.4 x 1.9	0.21 x 0.28	0.71 x 0.95	0.10 x 0.14
0.95 x 1.3	0.14 x 0.18	3.8 x 5.1	0.55 x 0.74	1.9 x 2.5	0.28 x 0.37	0.95 x 1.3	0.14 x 0.18
1.3 x 1.7	0.19 x 0.25	5.2 x 7.0	0.76 x 1.0	2.6 x 3.5	0.38 x 0.51	1.3 x 1.7	0.19 x 0.25
0.24	0.42	0.059	0.19	0.12	0.39	0.24	0.60
708	1260	177	581	354	1163	708	1800
6.7	46	1.7	12	3.4	23	6.7	46
0.010	0.0032	0.16	0.015	0.041	0.0038	0.010	0.00158
0.54 x 0.71	0.078 x 0.10	2.1 x 2.9	0.31 x 0.41	1.1 x 1.4	0.16 x 0.21	0.54 x 0.71	0.078 x 0.10
0.71 x 0.95	0.10 x 0.14	2.9 x 3.8	0.41 x 0.55	1.4 x 1.9	0.21 x 0.28	0.71 x 0.95	0.10 x 0.14
0.98 x 1.3	0.14 x 0.19	3.9 x 5.2	0.57 x 0.76	2.0 x 2.6	0.28 x 0.38	0.98 x 1.3	0.14 x 0.19
0.24	0.42	0.059	0.19	0.12	0.39	0.24	0.60
708	1260	177	581	354	1163	708	1800
8.4	58	2.1	15	4.2	29	8.4	58
0.010	0.0032	0.16	0.015	0.041	0.0038	0.010	0.00158
0.43 x 0.57	0.062 x 0.083	1.7 x 2.3	0.25 x 0.33	0.86 x 1.1	0.12 x 0.17	0.43 x 0.57	0.062 x 0.083
0.57 x 0.76	0.083 x 0.11	2.3 x 3.0	0.33 x 0.44	1.1 x 1.5	0.17 x 0.22	0.57 x 0.76	0.083 x 0.11
0.79 x 1.0	0.11 x 0.15	3.1 x 4.2	0.46 x 0.61	1.6 x 2.1	0.23 x 0.30	0.79 x 1.0	0.11 x 0.15

Note: Hi Res Objectives are not flat-field and therefore limited by field curvature at lower magnifications with both fixed and zoom systems.



Optical Performance - OPTEM 7:1 Zoom with LWD Objectives - Mini Camera Tubes

Chart 2D

		2X M Plan Apo 28-21-02-001 WD: 34mm		5X M Plan Apo 28-21-05-001 WD: 41mm		10X M Plan Apo 28-21-10-000 WD: 34mm				
Max FOV Dia.		14		6.9		3.2				
Max Coax FOV Dia.		11		6.5		2.2				
1.5X Mini Camera Tube 35-08-13-000 EFL: 300mm Image Circle Dia. (mm) 36		Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag			
		NA	0.024	0.057	0.059	0.14	0.12	0.30		
		Res (lp/mm)	71	170	177	420	354	900		
		Mag	1.3	8.7	3.2	22	6.30	44		
	FOV (mm)	DOF (mm)	1.0	0.18	0.16	0.029	0.041	0.0063		
		2/3"	5.2 x 7.0	0.76 x 1.0	2.1 x 2.8	0.30 x 0.40	1.0 x 1.4	0.15 x 0.20		
		1"	7.6 x 10	1.1 x 1.5	3.0 x 4.1	0.44 x 0.59	1.5 x 2.0	0.22 x 0.29		
		4/3"	11 x 14	1.6 x 2.1	4.3 x 5.7	0.62 x 0.83	2.1 x 2.9	0.31 x 0.41		
		APS-C	13 x 20	1.9 x 2.9	5.3 x 8.0	0.77 x 1.2	2.7 x 4.0	0.38 x 0.58		
		2X Mini Camera Tube 35-08-14-000 EFL: 400mm Image Circle Dia. (mm) 44		NA	0.024	0.057	0.059	0.14	0.12	0.30
Res (lp/mm)	71			170	177	420	354	900		
Mag	1.7			12	4.2	29	8.4	58		
DOF (mm)	1.0			0.18	0.16	0.029	0.041	0.0063		
FOV (mm)	2/3"		3.9 x 5.2	0.57 x 0.76	1.6 x 2.1	0.23 x 0.30	0.79 x 1.0	0.11 x 0.15		
	1"		5.7 x 7.6	0.83 x 1.1	2.3 x 3.0	0.33 x 0.44	1.1 x 1.5	0.17 x 0.22		
	4/3"		8.0 x 11	1.2 x 1.6	3.2 x 4.3	0.47 x 0.62	1.6 x 2.1	0.23 x 0.31		
	APS-C		10 x 15	1.4 x 2.2	4.0 x 6.0	0.58 x 0.87	2.0 x 3.0	0.29 x 0.43		
	2.5X Mini Camera Tube 35-08-15-000 EFL: 500mm Image Circle Dia. (mm) 44			NA	0.024	0.057	0.059	0.14	0.12	0.30
				Res (lp/mm)	71	170	177	420	354	900
Mag		2.1		15	5.3	36	11	73		
DOF (mm)		1.0		0.18	0.16	0.029	0.041	0.0063		
FOV (mm)		1"	4.6 x 6.1	0.66 x 0.88	1.8 x 2.4	0.26 x 0.35	0.91 x 1.2	0.13 x 0.18		
		4/3"	6.4 x 8.6	0.93 x 1.2	2.6 x 3.4	0.37 x 0.50	1.3 x 1.7	0.19 x 0.25		
		APS-C	8.0 x 12	1.2 x 1.7	3.2 x 4.8	0.46 x 0.69	1.6 x 2.4	0.23 x 0.35		
		35mm(Full)	11 x 17	1.7 x 2.5	4.6 x 6.9	0.66 x 0.99	2.3 x 3.4	0.33 x 0.50		
		3X Mini Camera Tube 35-08-16-000 EFL: 600mm Image Circle Dia. (mm) 44		NA	0.024	0.057	0.059	0.14	0.12	0.30
				Res (lp/mm)	71	170	177	420	354	900
Mag	2.5			17	6.3	44	13	87		
DOF (mm)	1.0			0.18	0.16	0.029	0.041	0.0063		
FOV (mm)	1"		3.8 x 5.1	0.55 x 0.74	1.5 x 2.0	0.22 x 0.29	0.76 x 1.0	0.11 x 0.15		
	4/3"		5.4 x 7.1	0.78 x 1.0	2.1 x 2.9	0.31 x 0.41	1.1 x 1.4	0.16 x 0.21		
	APS-C		6.6 x 10	0.96 x 1.4	2.7 x 4.0	0.38 x 0.58	1.3 x 2.0	0.19 x 0.29		
	35mm(Full)		10 x 14	1.4 x 2.1	3.8 x 5.7	0.55 x 0.83	1.9 x 2.9	0.28 x 0.41		

– Useable FOV Limited by Coax illumination (>50% Illumination)

– FOV Limited by vignetting

50X M Plan Apo is NOT recommended for use with a 7:1 Zoom
0.4X and 0.5X Camera Tubes are not recommended for use with
a 7:1 Zoom and Microscope Objectives.

	Height	x	Width	Diag.
2/3"	6.6	x	8.8	11
1"	9.6	x	12.8	16
4/3"	13.5	x	18	22.5
APS-C*	16.7	x	25.1	30
35mm (Full)	24	x	36	43.3

*Also known as Half Frame 35mm format

20X M Plan Apo 28-21-11-001 WD: 20mm		5X HiRes 28-20-44-000 WD: 34mm		10X HiRes 28-20-45-000 WD: 19mm		20X HiRes 28-20-46-000 WD: 13mm	
1.2		6.4		3.1		1.7	
0.83		4.9		2.2		1.1	
Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag
0.24	0.42	0.059	0.19	0.12	0.39	0.24	0.60
708	1260	177	581	354	1163	708	1800
13	87	3.2	22	6.3	44	13	87
0.010	0.0032	0.16	0.015	0.041	0.0038	0.010	0.0016
0.52 x 0.70	0.076 x 0.10	2.1 x 2.8	0.30 x 0.40	1.0 x 1.4	0.15 x 0.20	0.52 x 0.70	0.076 x 0.10
0.76 x 1.0	0.11 x 0.15	3.0 x 4.1	0.44 x 0.59	1.5 x 2.0	0.22 x 0.29	0.76 x 1.02	0.11 x 0.15
1.1 x 1.4	0.16 x 0.21	4.3 x 5.7	0.62 x 0.83	2.1 x 2.9	0.31 x 0.41	1.1 x 1.4	0.16 x 0.21
1.3 x 2.0	0.19 x 0.29	5.3 x 8.0	0.77 x 1.2	2.7 x 4.0	0.38 x 0.58	1.3 x 2.0	0.19 x 0.29
0.24	0.42	0.059	0.19	0.12	0.39	0.24	0.60
708	1260	177	581	354	1163	708	1800
17	116	4.2	29	8.4	58	17	116
0.010	0.0032	0.16	0.015	0.041	0.0038	0.010	0.0016
0.39 x 0.52	0.057 x 0.076	1.6 x 2.1	0.23 x 0.30	0.79 x 1.0	0.11 x 0.15	0.39 x 0.52	0.057 x 0.076
0.57 x 0.76	0.083 x 0.11	2.3 x 3.0	0.33 x 0.44	1.1 x 1.5	0.17 x 0.22	0.57 x 0.76	0.083 x 0.11
0.80 x 1.1	0.12 x 0.16	3.2 x 4.3	0.47 x 0.62	1.6 x 2.1	0.23 x 0.31	0.80 x 1.1	0.12 x 0.16
0.99 x 1.5	0.14 x 0.22	4.0 x 6.0	0.58 x 0.87	2.0 x 3.0	0.29 x 0.43	0.99 x 1.5	0.14 x 0.22
0.24	0.42	0.059	0.19	0.12	0.39	0.24	0.60
708	1260	177	581	354	1163	708	1800
21	145	5.3	36	11	73	21	145
0.010	0.0032	0.16	0.015	0.041	0.0038	0.010	0.0016
0.46 x 0.61	0.066 x 0.088	1.8 x 2.4	0.26 x 0.35	0.91 x 1.2	0.13 x 0.18	0.46 x 0.61	0.066 x 0.088
0.64 x 0.86	0.093 x 0.12	2.6 x 3.4	0.37 x 0.50	1.3 x 1.7	0.19 x 0.25	0.64 x 0.86	0.093 x 0.12
0.80 x 1.2	0.12 x 0.17	3.2 x 4.8	0.46 x 0.69	1.6 x 2.4	0.23 x 0.35	0.80 x 1.2	0.12 x 0.17
1.1 x 1.7	0.17 x 0.25	4.6 x 6.9	0.66 x 0.99	2.3 x 3.4	0.33 x 0.50	1.1 x 1.7	0.17 x 0.25
0.24	0.42	0.059	0.19	0.12	0.39	0.24	0.60
708	1260	177	581	354	1163	708	1800
25	174	6.3	44	13	87	25	174
0.010	0.0032	0.16	0.015	0.041	0.0038	0.010	0.0016
0.38 x 0.51	0.055 x 0.074	1.5 x 2.0	0.22 x 0.29	0.76 x 1.0	0.11 x 0.15	0.38 x 0.51	0.055 x 0.074
0.54 x 0.71	0.078 x 0.10	2.1 x 2.9	0.31 x 0.41	1.1 x 1.4	0.16 x 0.21	0.54 x 0.71	0.078 x 0.10
0.66 x 1.0	0.096 x 0.14	2.7 x 4.0	0.38 x 0.58	1.3 x 2.0	0.19 x 0.29	0.66 x 1.0	0.096 x 0.14
0.95 x 1.4	0.14 x 0.21	3.8 x 5.7	0.55 x 0.83	1.9 x 2.9	0.28 x 0.41	0.95 x 1.4	0.14 x 0.21

Note: Hi Res Objectives are not flat-field and therefore limited by field curvature at lower magnifications with both fixed and zoom systems.



Optical Performance - OPTEM 12.5:1 Zoom and Fetura+ with Lower Lens

Chart 3A

		0.4X Lower Lens 35-00-11-000 WD: 490mm EFL: 500mm		0.5X Lower Lens 35-00-10-000 WD: 390mm EFL: 400mm		0.67X Lower Lens 35-00-09-000 WD: 290mm EFL: 300mm		1X Lower Lens 35-00-08-000 WD: 190mm EFL: 200mm	
Max FOV Dia.		145		116		87		58	
Max Coax FOV Dia.		NR		NR		NR		20	
		Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag
0.4X Camera Tube 35-08-00-000 EFL: 80mm Image Circle Dia. (mm) 9.6	NA Res (lp/mm) Mag DOF (mm)	0.0036	0.019	0.0045	0.024	0.0060	0.032	0.0090	0.048
		11	58	14	72	18	96	27	144
		0.045	0.55	0.056	0.69	0.075	0.92	0.11	1.4
		44	1.5	28	0.98	16	0.55	7.0	0.25
	FOV (mm) Cam Format 1/3" 1/2" 2/3"	80 x 107	6.5 x 8.7	64 x 86	5.2 x 7.0	48 x 64	3.9 x 5.2	32 x 43	2.6 x 3.5
		107 x 143	8.7 x 12	86 x 114	7.0 x 9.3	64 x 86	5.2 x 7.0	43 x 57	3.5 x 4.6
		147 x 196	12 x 16	118 x 157	9.6 x 13	88 x 118	7.2 x 9.6	59 x 79	4.8 x 6.4
0.5X Camera Tube 35-08-01-000 EFL: 100mm Image Circle Dia. (mm) 12	NA Res (lp/mm) Mag DOF (m m)	0.0036	0.019	0.0045	0.024	0.0060	0.032	0.0090	0.048
		11	58	14	72	18	96	27	144
		0.056	0.69	0.070	0.86	0.093	1.2	0.14	1.7
		44	1.5	28	0.98	16	0.55	7.0	0.25
	FOV (mm) Cam Format 1/3" 1/2" 2/3"	64 x 86	5.2 x 7.0	51 x 69	4.2 x 5.6	39 x 51	3.1 x 4.2	26 x 34	2.1 x 2.8
		86 x 114	7.0 x 9.3	69 x 91	5.6 x 7.4	51 x 69	4.2 x 5.6	34 x 46	2.8 x 3.7
		118 x 157	9.6 x 13	94 x 126	7.7 x 10	71 x 94	5.7 x 7.7	47 x 63	3.8 x 5.1
0.6X Camera Tube 35-08-02-000 EFL: 120mm Image Circle Dia. (mm) 14.4	NA Res (lp/mm) Mag DOF (mm)	0.0036	0.019	0.0045	0.024	0.0060	0.032	0.0090	0.048
		11	58	14	72	18	96	27	144
		0.067	0.83	0.084	1.0	0.11	1.4	0.17	2.1
		44	1.5	28	0.98	16	0.55	7.0	0.25
	FOV (mm) Cam Format 1/3" 1/2" 2/3"	54 x 71	4.3 x 5.8	43 x 57	3.5 x 4.6	32 x 43	2.6 x 3.5	21 x 29	1.7 x 2.3
		71 x 95	5.8 x 7.7	57 x 76	4.6 x 6.2	43 x 57	3.5 x 4.6	29 x 38	2.3 x 3.1
		98 x 131	8.0 x 11	79 x 105	6.4 x 8.5	59 x 79	4.8 x 6.4	39 x 52	3.2 x 4.3
0.8X Camera Tube 35-08-04-000 EFL: 160mm Image Circle Dia. (mm) 19.2	NA Res (lp/mm) Mag DOF (mm)	0.0036	0.019	0.0045	0.024	0.0060	0.032	0.0090	0.048
		11	58	14	72	18	96	27	144
		0.090	1.1	0.11	1.4	0.15	1.8	0.22	2.8
		44	1.5	28	0.98	16	0.55	7.0	0.25
	FOV (mm) Cam Format 1/3" 1/2" 2/3"	40 x 54	3.3 x 4.3	32 x 43	2.6 x 3.5	24 x 32	2.0 x 2.6	16 x 21	1.3 x 1.7
		54 x 71	4.3 x 5.8	43 x 57	3.5 x 4.6	32 x 43	2.6 x 3.5	21 x 29	1.7 x 2.3
		74 x 98	6.0 x 8.0	59 x 79	4.8 x 6.4	44 x 59	3.6 x 4.8	29 x 39	2.4 x 3.2
1X Camera Tube 35-08-06-000 EFL: 200mm Image Circle Dia. (mm) 24	NA Res (lp/mm) Mag DOF (mm)	0.0036	0.019	0.0045	0.024	0.0060	0.032	0.0090	0.048
		11	58	14	72	18	96	27	144
		0.11	1.4	0.14	1.7	0.19	2.3	0.28	3.5
		44	1.5	28	0.98	16	0.55	7.0	0.25
	FOV (mm) Cam Format 1/3" 1/2" 2/3"	32 x 43	2.6 x 3.5	26 x 34	2.1 x 2.8	19 x 26	1.6 x 2.1	13 x 17	1.0 x 1.4
		43 x 57	3.5 x 4.6	34 x 46	2.8 x 3.7	26 x 34	2.1 x 2.8	17 x 23	1.4 x 1.9
		59 x 79	4.8 x 6.4	47 x 63	3.8 x 5.1	35 x 47	2.9 x 3.8	24 x 31	1.9 x 2.6

Useable FOV Limited by Coax illumination (>50% Illumination)

NR = Not recommended for Coax illumination

FOV Limited by vignetting

1.25X Lower Lens 35-00-06-000 WD: 155mm EFL: 160mm		1.43X Lower Lens 35-00-05-000 WD: 135mm EFL: 140mm		1.67 Lower Lens 35-00-04-000 WD: 110mm EFL: 120mm		2X Lower Lens 35-00-03-000 WD: 95mm EFL: 100mm		3X Lower Lens 35-00-01-000 WD: 50mm EFL: 67mm		4X Lower Lens 35-00-02-000 WD: 32mm EFL: 50mm	
46		41		35		29		19		15	
19		19		17		20		13		9.9	
Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag
0.011	0.060	0.013	0.069	0.015	0.080	0.018	0.096	0.027	0.14	0.036	0.19
34	180	39	206	45	240	54	288	81	432	108	576
0.14	17	0.16	2.0	0.19	2.3	0.22	2.8	0.34	4.1	0.45	5.5
4.5	0.16	3.4	0.12	2.5	0.089	1.8	0.062	0.78	0.027	0.44	0.015
26 x 34	2.1 x 2.8	23 x 30	1.8 x 2.4	19 x 26	1.6 x 2.1	16 x 21	1.3 x 1.7	11 x 14	0.87 x 1.2	8.0 x 11	0.65 x 0.87
34 x 46	2.8 x 3.7	30 x 40	2.4 x 3.2	26 x 34	2.1 x 2.8	21 x 29	1.7 x 2.3	14 x 19	1.2 x 1.5	11 x 14	0.87 x 1.2
47 x 63	3.8 x 5.1	41 x 55	3.3 x 4.5	35 x 47	2.9 x 3.8	29 x 39	2.4 x 3.2	20 x 26	1.6 x 2.1	15 x 20	1.2 x 1.6
0.011	0.060	0.013	0.069	0.015	0.080	0.018	0.096	0.027	0.14	0.036	0.19
34	180	39	206	45	240	54	288	81	432	108	576
0.18	2.2	0.20	2.5	0.23	2.9	0.28	3.5	0.42	5.2	0.56	6.9
4.5	0.16	3.4	0.12	2.5	0.089	1.8	0.062	0.78	0.027	0.44	0.015
21 x 27	1.7 x 2.2	18 x 24	1.5 x 1.9	15 x 21	1.3 x 1.7	13 x 17	1.0 x 1.4	8.6 x 11	0.70 x 0.9	6.4 x 8.6	0.52 x 0.70
27 x 37	2.2 x 3.0	24 x 32	1.9 x 2.6	21 x 27	1.7 x 2.2	17 x 23	1.4 x 1.9	11 x 15	0.9 x 1.2	8.6 x 11	0.70 x 0.93
38 x 50	3.1 x 4.1	33 x 44	2.7 x 3.6	28 x 38	2.3 x 3.1	24 x 31	1.9 x 2.6	16 x 21	1.3 x 1.7	12 x 16	0.96 x 1.3
0.011	0.060	0.013	0.069	0.015	0.080	0.018	0.096	0.027	0.14	0.036	0.19
34	180	39	206	45	240	54	288	81	432	108	576
0.21	2.6	0.24	3.0	0.28	3.5	0.34	4.1	0.50	6.2	0.67	8.3
4.5	0.16	3.4	0.12	2.5	0.089	1.8	0.062	0.78	0.027	0.44	0.015
17 x 23	1.4 x 1.9	15 x 20	1.2 x 1.6	13 x 17	1.0 x 1.4	11 x 14	0.87 x 1.2	7.1 x 10	0.58 x 0.77	5.4 x 7.1	0.43 x 0.58
23 x 30	1.9 x 2.5	20 x 27	1.6 x 2.2	17 x 23	1.4 x 1.9	14 x 19	1.2 x 1.5	10 x 13	0.77 x 1.0	7.1 x 9.5	0.58 x 0.77
31 x 42	2.6 x 3.4	28 x 37	2.2 x 3.0	24 x 31	1.9 x 2.6	20 x 26	1.6 x 2.1	13 x 17	1.1 x 1.4	9.8 x 13	0.80 x 1.1
0.011	0.060	0.013	0.069	0.015	0.080	0.018	0.096	0.027	0.14	0.036	0.19
34	180	39	206	45	240	54	288	81	432	108	576
0.28	3.5	0.32	3.9	0.37	4.6	0.45	5.5	0.67	8	0.90	11
4.5	0.16	3.4	0.12	2.5	0.089	1.8	0.062	0.78	0.027	0.44	0.015
13 x 17	1.0 x 1.4	11 x 15	0.91 x 1.2	9.6 x 13	0.78 x 1.0	8.0 x 11	0.65 x 0.87	5.4 x 7.1	0.44 x 0.58	4.0 x 5.4	0.33 x 0.43
17 x 23	1.4 x 1.9	15 x 20	1.2 x 1.6	13 x 17	1.0 x 1.4	11 x 14	0.87 x 1.2	7.1 x 10	0.58 x 0.77	5.4 x 7.1	0.43 x 0.58
24 x 31	1.9 x 2.6	21 x 28	1.7 x 2.2	18 x 24	1.4 x 1.9	15 x 20	1.2 x 1.6	10 x 13	0.80 x 1.1	7.4 x 9.8	0.60 x 0.80
0.011	0.060	0.013	0.069	0.015	0.080	0.018	0.096	0.027	0.14	0.036	0.19
34	180	39	206	45	240	54	288	81	432	108	576
0.35	4.3	0.40	4.9	0.47	5.8	0.56	6.9	0.84	10.3	1.1	14
4.5	0.16	3.4	0.12	2.5	0.089	1.8	0.062	0.78	0.027	0.44	0.015
10 x 14	0.83 x 1.1	9.0 x 12	0.73 x 0.97	7.7 x 10	0.63 x 0.83	6.4 x 8.6	0.52 x 0.70	4.3 x 5.7	0.35 x 0.46	3.2 x 4.3	0.26 x 0.35
14 x 18	1.1 x 1.5	12 x 16	0.97 x 1.3	10 x 14	0.83 x 1.1	8.6 x 11	0.70 x 0.93	5.7 x 7.6	0.46 x 0.62	4.3 x 5.7	0.35 x 0.46
19 x 25	1.5 x 2.0	17 x 22	1.3 x 1.8	14 x 19	1.1 x 1.5	12 x 16	0.96 x 1.3	7.9 x 10	0.64 x 0.85	5.9 x 7.9	0.48 x 0.64



Optical Performance - OPTEM 12.5:1 Zoom and Fetura+ with Lower Lens - Mini Came

Chart 3B

		0.4X Lower Lens 35-00-11-000 WD: 490mm EFL: 500mm		0.5X Lower Lens 35-00-10-000 WD: 390mm EFL: 400mm		0.67X Lower Lens 35-00-09-000 WD: 290mm EFL: 300mm		1X Lower Lens 35-00-08-000 WD: 190mm EFL: 200mm			
Max FOV Dia.		145		116		87		58			
Max Coax FOV Dia.		NR		NR		NR		20			
1.5X Mini Camera Tube 35-08-13-000 EFL: 300mm Image Circle Dia. (mm) 36			Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag	
	NA		0.0036	0.019	0.0045	0.024	0.0060	0.032	0.0090	0.048	
	Res (lp/mm)		11	58	14	72	18	96	27	144	
	Mag		0.17	2.1	0.21	2.6	0.28	3.5	0.42	5.2	
	DOF (mm)		44	1.5	28	0.98	16	0.55	7.0	0.25	
	FOV (mm) Cam Format	2/3"	39 x 52	3.2 x 4.3	31 x 42	2.6 x 3.4	24 x 31	1.9 x 2.6	16 x 21	1.3 x 1.7	
		1"	57 x 76	4.6 x 6.2	46 x 61	3.7 x 4.9	34 x 46	2.8 x 3.7	23 x 30	1.9 x 2.5	
		4/3"	80 x 107	6.5 x 8.7	64 x 86	5.2 x 7.0	48 x 64	3.9 x 5.2	32 x 43	2.6 x 3.5	
		APS-C	99 x 149	8.1 x 12	80 x 120	6.5 x 9.7	60 x 90	4.8 x 7.3	40 x 60	3.2 x 4.9	
	2X Mini Camera Tube 35-08-14-000 EFL: 400mm Image Circle Dia. (mm) 44	NA		0.0036	0.019	0.0045	0.024	0.0060	0.032	0.0090	0.048
Res (lp/mm)		11	58	14	72	18	96	27	144		
Mag		0.22	2.8	0.28	3.5	0.37	4.6	0.56	6.9		
DOF (m m)		44	1.5	28	0.98	16	0.55	7.0	0.25		
FOV (mm) Cam Format		2/3"	29 x 39	2.4 x 3.2	24 x 31	1.9 x 2.6	18 x 24	1.4 x 1.9	12 x 16	0.96 x 1.3	
		1"	43 x 57	3.5 x 4.6	34 x 46	2.8 x 3.7	26 x 34	2.1 x 2.8	17 x 23	1.4 x 1.9	
		4/3"	60 x 80	4.9 x 6.5	48 x 64	3.9 x 5.2	36 x 48	2.9 x 3.9	24 x 32	2.0 x 2.6	
		APS-C	75 x 112	6.1 x 9.1	60 x 90	4.8 x 7.3	45 x 67	3.6 x 5.5	30 x 45	2.4 x 3.6	
2.5X Mini Camera Tube 35-08-15-000 EFL: 500mm Image Circle Dia. (mm) 44		NA		0.0036	0.019	0.0045	0.024	0.0060	0.032	0.0090	0.048
		Res (lp/mm)		11	58	14	72	18	96	27	144
	Mag		0.28	3.5	0.35	4.3	0.47	5.8	0.70	8.6	
	DOF (mm)		44	1.5	28	0.98	16	0.55	7.0	0.25	
	FOV (mm) Cam Format	1"	34 x 46	2.8 x 3.7	27 x 37	2.2 x 3.0	21 x 27	1.7 x 2.2	14 x 18	1.1 x 1.5	
		4/3"	48 x 64	3.9 x 5.2	39 x 51	3.1 x 4.2	29 x 39	2.3 x 3.1	19 x 26	1.6 x 2.1	
		APS-C	60 x 90	4.8 x 7.3	48 x 72	3.9 x 5.8	36 x 54	2.9 x 4.4	24 x 36	1.9 x 2.9	
		35mm(Full)	86 x 129	7.0 x 10	69 x 103	5.6 x 8.3	51 x 77	4.2 x 6.3	34 x 51	2.8 x 4.2	
	3X Mini Camera Tube 35-08-16-000 EFL: 600mm Image Circle Dia. (mm) 44	NA		0.0036	0.019	0.0045	0.024	0.0060	0.032	0.0090	0.048
		Res (lp/mm)		11	58	14	72	18	96	27	144
Mag		0.34	4.1	0.42	5.2	0.56	6.9	0.84	10		
DOF (mm)		44	1.5	28	0.98	16	0.55	7.0	0.25		
FOV (mm) Cam Format		1"	29 x 38	2.3 x 3.1	23 x 30	1.9 x 2.5	17 x 23	1.4 x 1.9	11 x 15	0.93 x 1.2	
		4/3"	40 x 54	3.3 x 4.3	32 x 43	2.6 x 3.5	24 x 32	2.0 x 2.6	16 x 21	1.3 x 1.7	
		APS-C	50 x 75	4.0 x 6.1	40 x 60	3.2 x 4.9	30 x 45	2.4 x 3.6	20 x 30	1.6 x 2.4	
		35mm(Full)	71 x 107	5.8 x 8.7	57 x 86	4.6 x 7.0	43 x 64	3.5 x 5.2	29 x 43	2.3 x 3.5	

– Useable FOV Limited by Coax illumination (>50% Illumination)

– FOV Limited by vignetting

NR = Not recommended for Coax illumination

	Height	x	Width	Diag.
2/3"	6.6	x	8.8	11
1"	9.6	x	12.8	16
4/3"	13.5	x	18	22.5
APS-C*	16.7	x	25.1	30
35mm (Full)	24	x	36	43.3

*Also known as Half Frame 35mm format

1.25X Lower Lens 35-00-06-000 WD: 155mm EFL: 160mm		1.43X Lower Lens 35-00-05-000 WD: 135mm EFL: 140mm		1.67 Lower Lens 35-00-04-000 WD: 110mm EFL: 120mm		2X Lower Lens 35-00-03-000 WD: 95mm EFL: 100mm		3X Lower Lens 35-00-01-000 WD: 50mm EFL: 67mm		4X Lower Lens 35-00-02-000 WD: 32mm EFL: 50mm	
46		41		35		29		19		15	
19		19		17		20		13		9.9	
Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag
0.011	0.060	0.013	0.069	0.015	0.080	0.018	0.096	0.027	0.14	0.036	0.19
34	180	39	206	45	240	54	288	81	432	108	576
0.53	6.5	0.60	74	0.70	8.6	0.84	10	1.3	16	1.7	21
4.5	0.16	34	0.12	2.5	0.089	1.8	0.062	0.78	0.027	0.44	0.015
13 x 17	1.0 x 14	11 x 15	0.89 x 1.2	9.4 x 13	0.77 x 1.0	7.9 x 10	0.64 x 0.85	5.2 x 7.0	0.43 x 0.57	3.9 x 5.2	0.32 x 0.43
18 x 24	1.5 x 2.0	16 x 21	1.3 x 1.7	14 x 18	1.1 x 1.5	11 x 15	0.93 x 1.2	7.6 x 10	0.62 x 0.82	5.7 x 7.6	0.46 x 0.62
26 x 34	2.1 x 2.8	23 x 30	1.8 x 2.4	19 x 26	1.6 x 2.1	16 x 21	1.3 x 1.7	11 x 14	0.87 x 1.2	8.0 x 11	0.65 x 0.87
32 x 48	2.6 x 3.9	28 x 42	2.3 x 3.4	24 x 36	1.9 x 2.9	20 x 30	1.6 x 2.4	13 x 20	1.1 x 1.6	9.9 x 15	0.81 x 1.2
0.011	0.060	0.013	0.069	0.015	0.080	0.018	0.096	0.027	0.14	0.036	0.19
34	180	39	206	45	240	54	288	81	432	108	576
0.70	8.6	0.80	9.9	0.93	12	1.1	14	1.7	21	2.2	28
4.5	0.16	34	0.12	2.5	0.089	1.8	0.062	0.78	0.027	0.44	0.015
9.4 x 13	0.77 x 1.0	8.3 x 11	0.67 x 0.89	7.1 x 9.4	0.57 x 0.77	5.9 x 7.9	0.48 x 0.64	3.9 x 5.2	0.32 x 0.43	2.9 x 3.9	0.24 x 0.32
14 x 18	1.1 x 1.5	12 x 16	0.97 x 1.3	10 x 14	0.83 x 1.1	8.6 x 11	0.70 x 0.93	5.7 x 7.6	0.46 x 0.62	4.3 x 5.7	0.35 x 0.46
19 x 26	1.6 x 2.1	17 x 23	1.4 x 1.8	14 x 19	1.2 x 1.6	12 x 16	0.98 x 1.3	8.0 x 11	0.65 x 0.87	6.0 x 8.0	0.49 x 0.65
24 x 36	1.9 x 2.9	21 x 31	1.7 x 2.5	18 x 27	1.5 x 2.2	15 x 22	1.2 x 1.8	9.9 x 15	0.81 x 1.2	7.5 x 11	0.61 x 0.91
0.011	0.060	0.013	0.069	0.015	0.080	0.018	0.096	0.027	0.14	0.036	0.19
34	180	39	206	45	240	54	288	81	432	108	576
0.88	11	1.0	12	1.2	14	1.4	17	2.1	26	2.8	35
4.5	0.16	34	0.12	2.5	0.09	1.8	0.062	0.78	0.027	0.44	0.015
11 x 15	0.89 x 1.2	9.6 x 13	0.78 x 1.0	8.2 x 11	0.67 x 0.89	6.9 x 9.1	0.56 x 0.74	4.6 x 6.1	0.37 x 0.49	3.4 x 4.6	0.28 x 0.37
15 x 21	1.3 x 1.7	14 x 18	1.1 x 1.5	12 x 15	0.94 x 1.3	9.6 x 13	0.78 x 1.0	6.4 x 8.6	0.52 x 0.70	4.8 x 6.4	0.39 x 0.52
19 x 29	1.5 x 2.3	17 x 25	1.4 x 2.0	14 x 22	1.2 x 1.7	12 x 18	0.97 x 1.5	8.0 x 12	0.65 x 0.97	6.0 x 9.0	0.48 x 0.73
27 x 41	2.2 x 3.3	24 x 36	1.9 x 2.9	21 x 31	1.7 x 2.5	17 x 26	1.4 x 2.1	11 x 17	0.93 x 1.4	8.6 x 13	0.70 x 1.0
0.011	0.060	0.013	0.069	0.015	0.080	0.018	0.096	0.027	0.14	0.036	0.19
34	180	39	206	45	240	54	288	81	432	108	576
1.1	13	1.2	15	1.4	17	1.7	21	2.5	31	3.4	41
4.5	0.16	34	0.12	2.5	0.089	1.8	0.062	0.78	0.027	0.44	0.015
9.1 x 12	0.74 x 0.99	8.0 x 11	0.65 x 0.87	6.9 x 9.1	0.56 x 0.74	5.7 x 7.6	0.46 x 0.62	3.8 x 5.1	0.31 x 0.41	2.9 x 3.8	0.23 x 0.31
13 x 17	1.0 x 1.4	11 x 15	0.91 x 1.2	9.6 x 13	0.78 x 1.0	8.0 x 11	0.65 x 0.87	5.4 x 7.1	0.44 x 0.58	4.0 x 5.4	0.33 x 0.43
16 x 24	1.3 x 1.9	14 x 21	1.1 x 1.7	12 x 18	0.97 x 1.5	9.9 x 15	0.81 x 1.2	6.6 x 10	0.54 x 0.81	5.0 x 7.5	0.40 x 0.61
23 x 34	1.9 x 2.8	20 x 30	1.6 x 2.4	17 x 26	1.4 x 2.1	14 x 21	1.2 x 1.7	9.5 x 14	0.77 x 1.2	7.1 x 11	0.58 x 0.87



Optical Performance - OPTEM 12.5:1 Zoom and Fetura+ with LWD Objectives

Chart 3C

		2X M Plan Apo 28-21-02-001 WD: 34mm				5X M Plan Apo 28-21-05-001 WD: 41mm				10X M Plan Apo 28-21-10-000 WD: 34mm				
Max FOV Dia.		14				6.8				3.3				
Max Coax FOV Dia.		11				4.6				2.2				
0.4X Camera Tube 35-08-00-000 EFL: 80mm Image Circle Dia. (mm) 9.6	NA Res (lp/mm) Mag DOF (mm)		Low Mag		High Mag		Low Mag		High Mag		Low Mag		High Mag	
			0.018		0.057		0.045		0.14		0.090		0.30	
			54		170		135		420		270		900	
			0.22		2.8		0.56		6.9		1.1		14	
	FOV (mm) Cam Format	1.8		0.18		0.28		0.029		0.070		0.0063		
		1/3"		16 x 21	13 x 17	6.4 x 8.6	0.52 x 0.70	3.2 x 4.3	0.26 x 0.35					
		1/2"		21 x 29	17 x 23	8.6 x 11	0.70 x 0.93	4.3 x 5.7	0.35 x 0.46					
		2/3"		29 x 39	24 x 3.2	12 x 16	0.96 x 1.3	5.9 x 7.9	0.48 x 0.64					
0.5X Camera Tube 35-08-01-000 EFL: 100mm Image Circle Dia. (mm) 12	NA Res (lp/mm) Mag DOF (m m)		0.018		0.057		0.045		0.14		0.090		0.30	
			54		170		135		420		270		900	
			0.28		3.5		0.70		8.6		14		17	
			1.8		0.18		0.28		0.029		0.070		0.0063	
	FOV (mm) Cam Format	1/3"		13 x 17	1.0 x 14	5.1 x 6.9	0.42 x 0.56	2.6 x 34	0.21 x 0.28					
		1/2"		17 x 23	14 x 1.9	6.9 x 9.1	0.56 x 0.74	3.4 x 4.6	0.28 x 0.37					
		2/3"		24 x 31	1.9 x 2.6	94 x 13	0.77 x 1.0	4.7 x 6.3	0.38 x 0.51					
		0.6X Camera Tube 35-08-02-000 EFL: 120mm Image Circle Dia. (mm) 14.4	NA Res (lp/mm) Mag DOF (mm)		0.018		0.057		0.045		0.14		0.090	
54					170		135		420		270		900	
0.34					4.1		0.84		10		1.7		21	
1.8					0.18		0.28		0.029		0.070		0.0063	
FOV (mm) Cam Format	1/3"		11 x 14	0.87 x 1.2	4.3 x 5.7	0.35 x 0.46	2.1 x 2.9	0.17 x 0.23						
	1/2"		14 x 19	1.2 x 1.5	5.7 x 7.6	0.46 x 0.62	2.9 x 3.8	0.23 x 0.31						
	2/3"		20 x 26	1.6 x 2.1	7.9 x 10	0.64 x 0.85	3.9 x 5.2	0.32 x 0.43						
	0.8X Camera Tube 35-08-04-000 EFL: 160mm Image Circle Dia. (mm) 19.2		NA Res (lp/mm) Mag DOF (mm)		0.018		0.057		0.045		0.14		0.090	
54		170			135		420		270		900			
0.45		5.5			1.1		14		2.2		28			
1.8		0.18			0.28		0.029		0.070		0.0063			
FOV (mm) Cam Format		1/3"		8.0 x 11	0.65 x 0.87	3.2 x 4.3	0.26 x 0.35	1.6 x 2.1	0.13 x 0.17					
		1/2"		11 x 14	0.87 x 1.2	4.3 x 5.7	0.35 x 0.46	2.1 x 2.9	0.17 x 0.23					
		2/3"		15 x 20	1.2 x 1.6	5.9 x 7.9	0.48 x 0.64	2.9 x 3.9	0.24 x 0.32					
		1X Camera Tube 35-08-06-000 EFL: 200mm Image Circle Dia. (mm) 24	NA Res (lp/mm) Mag DOF (mm)		0.018		0.057		0.045		0.14		0.090	
54					170		135		420		270		900	
0.56					6.9		14		17		2.8		35	
1.8					0.18		0.28		0.029		0.070		0.0063	
FOV (mm) Cam Format	1/3"		6.4 x 8.6	0.52 x 0.70	2.6 x 3.4	0.21 x 0.28	1.3 x 1.7	0.10 x 0.14						
	1/2"		8.6 x 11	0.70 x 0.93	3.4 x 4.6	0.28 x 0.37	1.7 x 2.3	0.14 x 0.19						
	2/3"		12 x 16	0.96 x 1.3	4.7 x 6.3	0.38 x 0.51	2.4 x 3.1	0.19 x 0.26						

– Useable FOV Limited by Coax illumination (>50% Illumination)

– FOV Limited by vignetting

50X M Plan Apo is NOT recommended for use with a 12.5:1 Zoom
0.4X and 0.5X Camera Tubes are not recommended for use with
a 12.5:1 Zoom and Microscope Objectives.

20X M Plan Apo 28-21-11-001 WD: 20mm		5X HiRes 28-20-44-000 WD: 34mm		10X HiRes 28-20-45-000 WD: 19mm		20X HiRes 28-20-46-000 WD: 13mm	
1.2		6.6		3.2		1.6	
0.83		5.0		2.3		1.1	
Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag
018	042	0.045	0.23	0.090	0.45	018	0.60
540	1260	135	675	270	1350	540	1800
2.2	28	0.56	6.9	1.1	14	2.2	28
0.018	0.0032	0.28	0.011	0.070	0.0028	0.018	0.0016
1.6 x 21	0.13 x 0.17	6.4 x 8.6	0.52 x 0.70	3.2 x 4.3	0.26 x 0.35	1.6 x 21	0.13 x 0.17
2.1 x 2.9	0.17 x 0.23	8.6 x 11	0.70 x 0.93	4.3 x 5.7	0.35 x 0.46	2.1 x 2.9	0.17 x 0.23
2.9 x 3.9	0.24 x 0.32	12 x 16	0.96 x 1.3	5.9 x 7.9	0.48 x 0.64	2.9 x 3.9	0.24 x 0.32
018	042	0.045	0.23	0.090	0.45	018	0.60
540	1260	135	675	270	1350	540	1800
2.8	35	0.70	8.6	1.4	17	2.8	35
0.018	0.0032	0.28	0.011	0.070	0.0028	0.018	0.0016
1.3 x 1.7	0.10 x 0.14	5.1 x 6.9	0.42 x 0.56	2.6 x 3.4	0.21 x 0.28	1.3 x 1.7	0.10 x 0.14
1.7 x 2.3	0.14 x 0.19	6.9 x 9.1	0.56 x 0.74	3.4 x 4.6	0.28 x 0.37	1.7 x 2.3	0.14 x 0.19
2.4 x 3.1	0.19 x 0.26	9.4 x 13	0.77 x 1.0	4.7 x 6.3	0.38 x 0.51	2.4 x 3.1	0.19 x 0.26
018	042	0.045	0.23	0.090	0.45	018	0.60
540	1260	135	675	270	1350	540	1800
3.4	41	0.84	10.4	1.7	21	3.4	41
0.018	0.0032	0.28	0.011	0.070	0.0028	0.018	0.0016
1.1 x 1.4	0.087 x 0.12	4.3 x 5.7	0.35 x 0.46	2.1 x 2.9	0.17 x 0.23	1.1 x 1.4	0.087 x 0.12
1.4 x 1.9	0.12 x 0.15	5.7 x 7.6	0.46 x 0.62	2.9 x 3.8	0.23 x 0.31	1.4 x 1.9	0.12 x 0.15
2.0 x 2.6	0.16 x 0.21	7.9 x 10	0.64 x 0.85	3.9 x 5.2	0.32 x 0.43	2.0 x 2.6	0.16 x 0.21
018	042	0.045	0.23	0.090	0.45	018	0.60
540	1260	135	675	270	1350	540	1800
4.5	55	1.1	14	2.2	28	4.5	55
0.018	0.0032	0.28	0.011	0.070	0.0028	0.018	0.0016
0.80 x 1.1	0.065 x 0.087	3.2 x 4.3	0.26 x 0.35	1.6 x 2.1	0.13 x 0.17	0.80 x 1.1	0.065 x 0.087
1.1 x 1.4	0.087 x 0.12	4.3 x 5.7	0.35 x 0.46	2.1 x 2.9	0.17 x 0.23	1.1 x 1.4	0.087 x 0.12
1.5 x 2.0	0.12 x 0.16	5.9 x 7.9	0.48 x 0.64	2.9 x 3.9	0.24 x 0.32	1.5 x 2.0	0.12 x 0.16
018	042	0.045	0.23	0.090	0.45	018	0.60
540	1260	135	675	270	1350	540	1800
5.6	69	1.4	17	2.8	35	5.6	69
0.018	0.0032	0.28	0.011	0.070	0.0028	0.018	0.0016
0.64 x 0.86	0.052 x 0.070	2.6 x 3.4	0.21 x 0.28	1.3 x 1.7	0.10 x 0.14	0.64 x 0.86	0.052 x 0.070
0.86 x 1.1	0.070 x 0.093	3.4 x 4.6	0.28 x 0.37	1.7 x 2.3	0.14 x 0.19	0.86 x 1.1	0.070 x 0.093
1.2 x 1.6	0.096 x 0.13	4.7 x 6.3	0.38 x 0.51	2.4 x 3.1	0.19 x 0.26	1.2 x 1.6	0.096 x 0.13

Note: Hi Res Objectives are not flat-field and therefore limited by field curvature at lower magnifications with both fixed and zoom systems.



Optical Performance - OPTEM 12.5:1 Zoom and Fetura+ with LWD Objectives - Mini Camera Tubes

Chart 3D

		2X M Plan Apo 28-21-02-001 WD: 34mm		5X M Plan Apo 28-21-05-001 WD: 41mm		10X M Plan Apo 28-21-10-000 WD: 34mm						
Max FOV Dia.		14		6.8		3.3						
Max Coax FOV Dia.		11		4.6		2.2						
1.5X Mini Camera Tube 35-08-13-000 EFL: 300mm Image Circle Dia. (mm) 36			Low Mag		High Mag		Low Mag		High Mag			
			0.018		0.057		0.045		0.14			
			54		170		135		420			
			0.84		10		21		26			
			1.8		0.18		0.28		0.029			
	FOV (mm)	Cam Format	2/3"		7.9 x 10		0.64 x 0.85		3.1 x 4.2		0.26 x 0.34	
			1"		11 x 15		0.93 x 1.2		4.6 x 6.1		0.37 x 0.49	
			4/3"		16 x 21		1.3 x 1.7		6.4 x 8.6		0.52 x 0.70	
			APS-C		20 x 30		1.6 x 2.4		8.0 x 12		0.65 x 0.97	
2X Mini Camera Tube 35-08-14-000 EFL: 400mm Image Circle Dia. (mm) 44			0.018		0.057		0.045		0.14			
			54		170		135		420			
			1.1		14		2.8		35			
			1.8		0.178		0.28		0.029			
	FOV (mm)	Cam Format	2/3"		5.9 x 7.9		0.48 x 0.64		2.4 x 3.1		0.19 x 0.26	
			1"		8.6 x 11		0.70 x 0.93		3.4 x 4.6		0.28 x 0.37	
			4/3"		12 x 16		0.98 x 1.3		4.8 x 6.4		0.39 x 0.52	
			APS-C		15 x 22		1.2 x 1.8		6.0 x 9.0		0.48 x 0.73	
	2.5X Mini Camera Tube 35-08-15-000 EFL: 500mm Image Circle Dia. (mm) 44			0.018		0.057		0.045		0.14		
		54		170		135		420				
		1.4		17		3.5		43				
		1.8		0.18		0.28		0.029				
FOV (mm)		Cam Format	1"		6.9 x 9.1		0.56 x 0.74		2.7 x 3.7		0.22 x 0.30	
			4/3"		9.6 x 13		0.78 x 1.0		3.9 x 5.1		0.31 x 0.42	
			APS-C		12 x 18		0.97 x 1.5		4.8 x 7.2		0.39 x 0.58	
			35mm(Full)		17 x 26		1.4 x 2.1		6.9 x 10		0.56 x 0.83	
3X Mini Camera Tube 35-08-16-000 EFL: 600mm Image Circle Dia. (mm) 44				0.018		0.057		0.045		0.14		
			54		170		135		420			
			1.7		21		4.2		52			
			1.8		0.18		0.28		0.029			
	FOV (mm)	Cam Format	1"		5.7 x 7.6		0.46 x 0.62		2.3 x 3.0		0.19 x 0.25	
			4/3"		8.0 x 11		0.65 x 0.87		3.2 x 4.3		0.26 x 0.35	
			APS-C		9.9 x 15		0.81 x 1.2		4.0 x 6.0		0.32 x 0.49	
			35mm(Full)		14 x 21		1.2 x 1.7		5.7 x 8.6		0.46 x 0.70	

Useable FOV Limited by Coax illumination (>50% Illumination)

FOV Limited by vignetting

50X M Plan Apo is NOT recommended for use with a 12.5:1 Zoom
0.4X and 0.5X Camera Tubes are not recommended for use with
a 12.5:1 Zoom and Microscope Objectives.

	Height	x	Width	Diag.
2/3"	6.6	x	8.8	11
1"	9.6	x	12.8	16
4/3"	13.5	x	18	22.5
APS-C*	16.7	x	25.1	30
35mm (Full)	24	x	36	43.3

*Also known as Half Frame 35mm format

Camera Tubes

20X M Plan Apo 28-21-11-001 WD: 20mm		5X HiRes 28-20-44-000 WD: 34mm		10X HiRes 28-20-45-000 WD: 19mm		20X HiRes 28-20-46-000 WD: 13mm	
1.2		6.6		3.2		1.6	
0.83		5.0		2.3		1.1	
Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag
0.18	0.42	0.045	0.225	0.090	0.45	0.18	0.60
540	1260	135	675	270	1350	540	1800
8.4	104	2.1	26	4.2	52	8.4	104
0.018	0.0032	0.28	0.011	0.070	0.0028	0.018	0.0016
0.79 x 1.0	0.064 x 0.085	3.1 x 4.2	0.26 x 0.34	1.6 x 2.1	0.13 x 0.17	0.79 x 1.0	0.064 x 0.085
1.1 x 1.5	0.093 x 0.12	4.6 x 6.1	0.37 x 0.49	2.3 x 3.0	0.19 x 0.25	1.1 x 1.5	0.093 x 0.12
1.6 x 2.1	0.13 x 0.17	6.4 x 8.6	0.52 x 0.70	3.2 x 4.3	0.26 x 0.35	1.6 x 2.1	0.13 x 0.17
2.0 x 3.0	0.16 x 0.24	8.0 x 12	0.65 x 0.97	4.0 x 6.0	0.32 x 0.49	2.0 x 3.0	0.16 x 0.24
0.18	0.42	0.045	0.225	0.090	0.45	0.18	0.60
540	1260	135	675	270	1350	540	1800
11	138	2.8	35	5.6	69	11	138
0.018	0.0032	0.28	0.011	0.070	0.0028	0.018	0.0016
0.59 x 0.79	0.048 x 0.064	2.4 x 3.1	0.19 x 0.26	1.2 x 1.6	0.096 x 0.13	0.59 x 0.79	0.048 x 0.064
0.86 x 1.1	0.070 x 0.093	3.4 x 4.6	0.28 x 0.37	1.7 x 2.3	0.14 x 0.19	0.86 x 1.1	0.070 x 0.093
1.2 x 1.6	0.098 x 0.13	4.8 x 6.4	0.39 x 0.52	2.4 x 3.2	0.20 x 0.26	1.2 x 1.6	0.098 x 0.13
1.5 x 2.2	0.12 x 0.18	6.0 x 9.0	0.48 x 0.73	3.0 x 4.5	0.24 x 0.36	1.5 x 2.2	0.12 x 0.18
0.18	0.42	0.045	0.225	0.090	0.45	0.18	0.60
540	1260	135	675	270	1350	540	1800
14	173	3.5	43	7.0	86	14	173
0.018	0.0032	0.28	0.011	0.070	0.0028	0.018	0.0016
0.69 x 0.91	0.056 x 0.074	2.7 x 3.7	0.22 x 0.30	1.4 x 1.8	0.11 x 0.15	0.69 x 0.91	0.056 x 0.074
0.96 x 1.3	0.078 x 0.10	3.9 x 5.1	0.31 x 0.42	1.9 x 2.6	0.16 x 0.21	0.96 x 1.3	0.078 x 0.10
1.2 x 1.8	0.097 x 0.15	4.8 x 7.2	0.39 x 0.58	2.4 x 3.6	0.19 x 0.29	1.2 x 1.8	0.097 x 0.15
1.7 x 2.6	0.14 x 0.21	6.9 x 10	0.56 x 0.83	3.4 x 5.1	0.28 x 0.42	1.7 x 2.6	0.14 x 0.21
0.18	0.42	0.045	0.225	0.090	0.45	0.18	0.60
540	1260	135	675	270	1350	540	1800
17	207	4.2	52	8.4	104	17	207
0.018	0.0032	0.28	0.011	0.070	0.0028	0.018	0.0016
0.57 x 0.76	0.046 x 0.062	2.3 x 3.0	0.19 x 0.25	1.1 x 1.5	0.093 x 0.12	0.57 x 0.76	0.046 x 0.062
0.80 x 1.1	0.065 x 0.087	3.2 x 4.3	0.26 x 0.35	1.6 x 2.1	0.13 x 0.17	0.80 x 1.1	0.065 x 0.087
0.99 x 1.5	0.081 x 0.12	4.0 x 6.0	0.32 x 0.49	2.0 x 3.0	0.16 x 0.24	0.99 x 1.5	0.081 x 0.12
1.4 x 2.1	0.12 x 0.17	5.7 x 8.6	0.46 x 0.70	2.9 x 4.3	0.23 x 0.35	1.4 x 2.1	0.12 x 0.17

Note: Hi Res Objectives are not flat-field and therefore limited by field curvature at lower magnifications with both fixed and zoom systems.



Optical Performance - Infinity Macro Lens with 2X

Chart 4

42-35-41-000

		WD: 500mm 0.14X	WD: 400mm 0.17X	WD: 300mm 0.21X
Max FOV Dia.		275	225	175
Fixed Mag. 1X Camera Tube 35-08-06-000 Image Circle Dia. (mm) 24 18mm Stop	NA	0.0061	0.0075	0.0096
	Res (lp/mm)	18	22	29
	Mag	0.14	0.17	0.21
	DOF (mm)	15	10	6.2
	FOV (mm) Cam Format	1/3"	22 x 29	17 x 23
		1/2"	29 x 39	23 x 30
		2/3"	40 x 53	31 x 41

Max FOV Dia.		240		200		150	
		Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag
7:1 Zoom 1X Camera Tube Image Circle Dia. (mm) 24	NA	0.0016	0.0053	0.0020	0.0064	0.0025	0.0083
	Res (lp/mm)	4.8	16	5.9	19	7.5	25
	Mag	0.057	0.39	0.070	0.48	0.090	0.62
	DOF (mm)	220	20	148	14	90	8.3
	FOV (mm) Cam Format	1/3"	63 x 84	52 x 69	7.5 x 10	40 x 54	5.8 x 7.8
		1/2"	84 x 112	69 x 92	10 x 13	54 x 71	7.8 x 10
		2/3"	116 x 154	95 x 126	14 x 18	74 x 98	11 x 14

Max FOV Dia.		210		175		135	
		Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag
12:1 Zoom 1X Camera Tube 35-08-06-000 Image Circle Dia. (mm) 24	NA	0.0012	0.0065	0.0015	0.0080	0.0019	0.010
	Res (lp/mm)	3.7	20	4.5	24	5.8	31
	Mag	0.038	0.47	0.046	0.57	0.060	0.74
	DOF (mm)	378	13	255	8.9	154	5.4
	FOV (mm) Cam Format	1/3"	95 x 126	78 x 103	6.3 x 8.4	60 x 80	4.9 x 6.5
		1/2"	126 x 168	103 x 138	8.4 x 11	80 x 107	6.5 x 8.7
		2/3"	173 x 231	142 x 190	12 x 15	111 x 147	9.0 x 12

– FOV Limited by vignetting

1X Camera Tube shown. For other Camera tubes, multiply the magnification in the chart by the Camera tube mag., and divide the FOV values by the Camera tube mag. NA, Resolution, and DOF are not affected by the Camera Tube.

NOTE: Wide Angle Objective is not recommended for use with coaxial Illumination.

The Wide Angle Objective can be focused out to infinity. At WDs greater than 1m, it can be thought of as a video lens.

Fixed Mag:	
EFL:	73 *CT mag
f/# :	200/Stop Diameter*CT mag

NOTE: The Camera Tube Magnification will affect the EFL and the f/# of the video lens.

7:1 Zoom:	
EFL (low mag):	30*CT mag
EFL (high mag):	210*CT mag
f/#: (low mag):	18*CT mag
f/#: (high mag):	38*CT mag

Lower Lens

35-00-03-000

WD: 200mm 0.30X	WD: 150mm 0.38X	WD: 100mm 0.50X	WD: 50mm 0.75X
125	100	75	50
0.013	0.017	0.023	0.034
40	51	68	103
0.30	0.38	0.50	0.77
3.1	2.0	1.1	0.48
12 x 16	9.6 x 13	7.1 x 9.5	4.7 x 6.3
16 x 21	13 x 17	9.5 x 13	6.3 x 8.4
22 x 29	18 x 23	13 x 17	8.6 x 11

110		85		65		43	
Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag
0.0035	0.012	0.0044	0.015	0.0059	0.020	0.0090	0.030
11	35	13	44	18	59	27	89
0.13	0.87	0.16	1.1	0.21	1.5	0.32	2.2
45	4.2	29	2.7	16	1.5	6.9	0.64
29 x 38	4.1 x 5.5	23 x 30	3.3 x 4.4	17 x 23	2.5 x 3.3	11 x 15	1.6 x 2.2
38 x 51	5.5 x 7.4	30 x 41	4.4 x 5.9	23 x 30	3.3 x 4.4	15 x 20	2.2 x 2.9
52 x 70	7.6 x 10	42 x 56	6.1 x 8.1	31 x 42	4.5 x 6.0	21 x 27	3.0 x 4.0

95		77		58		38	
Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag
0.0027	0.014	0.0034	0.018	0.0045	0.024	0.0069	0.037
8.1	43	10	54	14	73	21	110
0.084	1.0	0.11	1.3	0.14	1.7	0.21	2.6
78	2.7	50	1.7	28	0.97	12	0.42
43 x 57	3.5 x 4.6	34 x 46	2.8 x 3.7	26 x 34	2.1 x 2.8	17 x 22	1.4 x 1.8
57 x 76	4.6 x 6.2	46 x 61	3.7 x 4.9	34 x 45	2.8 x 3.7	22 x 30	1.8 x 2.4
79 x 105	6.4 x 8.5	63 x 84	5.1 x 6.8	47 x 62	3.8 x 5.1	31 x 41	2.5 x 3.3

12.5:1 Zoom:	
EFL (low mag):	20°CT mag
EFL (high mag):	250°CT mag
f/#: (low mag):	15.5°CT mag
f/#: (high mag):	36°CT mag



Optical Performance - Fixed Magnification SWIR

Chart 5A

		0.5X Lower Lens 45-00-10-000 WD: 390mm EFL: 400mm			1X Lower Lens 45-00-08-000 WD: 190mm EFL: 200mm			1.25X Lower Lens 45-00-06-000 WD: 155mm EFL: 160mm			2X Lower Lens 45-00-03-000 WD: 95mm EFL: 100mm		
Max FOV Dia.		80			40			32			20		
Max Coax FOV Dia.		13			12			12			15		
0.5X Camera Tube 45-08-01-000 EFL: 100mm Image Circle Dia. (mm) 12 8mm Stop	FOV (mm) Cam Format	NA	0.010		0.020		0.025		0.040				
		Res (lp/mm)	14		28		35		56				
		Mag	0.25		0.50		0.63		1.0				
		DOF (mm)	11.77		2.94		1.88		0.74				
		1/3"	14.4	x	19.2	7.2	x	9.6	5.8	x	7.7	3.6	x
	1/2"	19.2	x	25.6	9.6	x	12.8	7.7	x	10.2	4.8	x	6.4
2/3"	26.4	x	35.2	13.2	x	17.6	10.6	x	14.1	6.6	x	8.8	
0.8X Camera Tube 45-08-04-000 EFL: 160mm Image Circle Dia. (mm) 19.2 8mm Stop	FOV (mm) Cam Format	NA	0.010		0.020		0.025		0.040				
		Res (lp/mm)	14		28		35		56				
		Mag	0.40		0.80		1.0		1.6				
		DOF (mm)	11.77		2.94		1.88		0.74				
		1/2"	12.0	x	16.0	6.0	x	8.0	4.8	x	6.4	3.0	x
	2/3"	16.5	x	22.0	8.3	x	11.0	6.6	x	8.8	4.1	x	5.5
1"	24.0	x	32.0	12.0	x	16.0	9.6	x	12.8	6.0	x	8.0	
1.0X Camera Tube 45-08-06-000 EFL: 200mm Image Circle Dia. (mm) 24 12mm Stop	FOV (mm) Cam Format	NA	0.015		0.030		0.038		0.060				
		Res (lp/mm)	21		42		52		84				
		Mag	0.50		1.00		1.25		2.00				
		DOF (mm)	5.23		1.31		0.84		0.33				
		2/3"	13.2	x	17.6	6.6	x	8.8	5.3	x	7.0	3.3	x
	1"	19.2	x	25.6	9.6	x	12.8	7.7	x	10.2	4.8	x	6.4
4/3"	27.0	x	36.0	13.5	x	18.0	10.8	x	14.4	6.8	x	9.0	
1.5X Mini Camera Tube 45-08-13-000 EFL: 300mm Image Circle Dia. (mm) 36 12mm Stop	FOV (mm) Cam Format	NA	0.015		0.030		0.038		0.060				
		Res (lp/mm)	21		42		52		84				
		Mag	0.75		1.5		1.9		3.0				
		DOF (mm)	5.23		1.31		0.84		0.33				
		2/3"	8.8	x	11.7	4.4	x	5.9	3.5	x	4.7	2.2	x
	1"	12.8	x	17.1	6.4	x	8.5	5.1	x	6.8	3.2	x	4.3
4/3"	18.0	x	24.0	9.0	x	12.0	7.2	x	9.6	4.5	x	6.0	
2.0X Mini Camera Tube 45-08-14-000 EFL: 400mm Image Circle Dia. (mm) 44 12mm Stop	FOV (mm) Cam Format	NA	0.015		0.030		0.038		0.060				
		Res (lp/mm)	21		42		52		84				
		Mag	1.00		2.0		2.50		4.0				
		DOF (mm)	5.23		1.31		0.84		0.33				
		2/3"	6.6	x	8.8	3.3	x	4.4	2.6	x	3.5	1.7	x
	1"	9.6	x	12.8	4.8	x	6.4	3.8	x	5.1	2.4	x	3.2
4/3"	13.5	x	18.0	6.8	x	9.0	5.4	x	7.2	3.4	x	4.5	

Useable FOV Limited by Coax illumination (>50% Illumination)

FOV Limited by vignetting

Note:

- SWIR Specifications based on primary wavelength of 1177nm
- FUSION SWIR supports operating waveband from 700 - 1700 nm

	Height	x	Width	Diag.
2/3"	6.6	x	8.8	11
1"	9.6	x	12.8	16
4/3"	13.5	x	18	22.5
APS-C*	16.7	x	25.1	30
35mm (Full)	24	x	36	43.3

*Also known as Half Frame 35mm format

Optical Performance - OPTEM 7:1 Zoom SWIR

Chart 5B

		0.5X Lower Lens 45-00-10-000 WD: 390mm EFL: 400mm		1X Lower Lens 45-00-08-000 WD: 190mm EFL: 200mm		1.25X Lower Lens 45-00-06-000 WD: 155mm EFL: 160mm		2X Lower Lens 45-00-03-000 WD: 95mm EFL: 100mm	
Max FOV Dia.		125		63		50		31	
Max Coax FOV Dia.		NR		19		19		19	
		Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag	Low Mag	High Mag
0.5X Camera Tube 45-08-01-000 EFL: 100mm Image Circle Dia. (mm) 12	NA Res (lp/mm) Mag DOF (mm)	0.0059	0.019	0.012	0.039	0.015	0.048	0.024	0.078
		8	26	17	54	21	67	33	109
		0.11	0.73	0.21	1.45	0.26	1.84	0.42	2.90
		34	3.3	8.2	0.77	5.2	0.51	2.0	0.193
	FOV (mm) Can Format 2/3" 1/2" 2/3"	34 x 46	5.0 x 6.6	17 x 23	2.5 x 3.3	14 x 18	2.0 x 2.6	9 x 11	1.2 x 1.7
		46 x 61	6.6 x 8.8	23 x 30	3.3 x 4.4	18 x 25	2.6 x 3.5	11 x 15	1.7 x 2.2
		63 x 84	9.1 x 12.1	31 x 42	4.6 x 6.1	25 x 34	3.6 x 4.8	16 x 21	2.3 x 3.0
0.8X Camera Tube 45-08-04-000 EFL: 160mm Image Circle Dia. (mm) 19.2	NA Res (lp/mm) Mag DOF (mm)	0.0059	0.019	0.012	0.039	0.015	0.048	0.024	0.078
		8	26	17	54	21	67	33	109
		0.17	1.17	0.34	2.30	0.42	2.90	0.67	4.60
		34	3.3	8.2	0.77	5.2	0.51	2.0	0.193
	FOV (mm) Can Format 1/2" 2/3" 1"	29 x 38	4.1 x 5.5	14 x 19	2.1 x 2.8	11.4 x 15	1.7 x 2.2	7.2 x 9.6	1.0 x 1.4
		39 x 52	5.6 x 7.5	20 x 26	2.9 x 3.8	16 x 21	2.3 x 3.0	9.9 x 13	1.4 x 1.9
		57 x 76	8.2 x 10.9	28 x 38	4.2 x 5.6	23 x 30	3.3 x 4.4	14.3 x 19	2.1 x 2.8
1.0X Camera Tube 45-08-06-000 EFL: 200mm Image Circle Dia. (mm) 24	NA Res (lp/mm) Mag DOF (mm)	0.0059	0.019	0.012	0.039	0.015	0.048	0.024	0.078
		8	26	17	54	21	67	33	109
		0.21	1.45	0.42	2.90	0.53	3.60	0.84	5.80
		34	3.3	8.2	0.77	5.2	0.51	2.0	0.193
	FOV (mm) Can Format 2/3" 1" 4/3"	31 x 42	4.6 x 6.1	16 x 21	2.3 x 3.0	12.5 x 16.6	1.83 x 2.4	7.9 x 10.5	1.1 x 1.5
		46 x 61	6.6 x 8.8	23 x 30	3.3 x 4.4	18.1 x 24	2.7 x 3.6	11.5 x 15.3	1.7 x 2.2
		64 x 86	9.3 x 12.4	32 x 43	4.7 x 6.2	25 x 34	3.8 x 5.0	16.1 x 22	2.3 x 3.1
1.5X Mini Camera Tube 45-08-13-000 EFL: 300mm Image Circle Dia. (mm) 36	NA Res (lp/mm) Mag DOF (mm)	0.0059	0.019	0.012	0.039	0.015	0.048	0.024	0.078
		8	26	17	54	21	67	33	109
		0.32	2.18	0.63	4.40	0.79	5.40	1.26	8.70
		34	3.3	8.2	0.77	5.2	0.51	2.0	0.193
	FOV (mm) Can Format 2/3" 1" 4/3"	21 x 28	3.0 x 4.0	10 x 14	1.5 x 2.0	8.4 x 11	1.2 x 1.6	5.2 x 7.0	0.8 x 1.0
		30 x 40	4.4 x 5.9	15 x 20	2.2 x 2.9	12 x 16	1.8 x 2.4	7.6 x 10	1.1 x 1.5
		43 x 57	6.2 x 8.3	21 x 29	3.1 x 4.1	17 x 23	2.5 x 3.3	11 x 14	1.6 x 2.1
2.0X Mini Camera Tube 45-08-14-000 EFL: 400mm Image Circle Dia. (mm) 44	NA Res (lp/mm) Mag DOF (mm)	0.0059	0.019	0.012	0.039	0.015	0.048	0.024	0.078
		8	26	17	54	21	67	33	109
		0.42	2.90	0.84	5.80	1.05	7.29	1.69	11.50
		34	3.3	8.2	0.77	5.2	0.51	2.0	0.193
	FOV (mm) Can Format 2/3" 1" 4/3"	16 x 21	2.3 x 3.0	7.9 x 10	1.1 x 1.5	6.3 x 8.4	0.9 x 1.2	3.9 x 5.2	0.6 x 0.8
		23 x 30	3.3 x 4.4	11 x 15	1.7 x 2.2	9.1 x 12	1.3 x 1.8	5.7 x 7.6	0.8 x 1.1
		32 x 43	4.7 x 6.2	16 x 21	2.3 x 3.1	13 x 17	1.9 x 2.5	8.0 x 11	1.2 x 1.6

– Useable FOV Limited by Coax illumination (>50% Illumination)

– FOV Limited by vignetting



FUSION Flexibility...

At the heart of FUSION's extreme versatility, now with SWIR compatibility, is the simplicity of stacking a variety of modules to affect magnification, function and form of the lens system.

Following are the basic required components of a functional FUSION lens assembly. From here, features and accessories are easily swapped in to meet your requirements.

Modular design allows FUSION to evolve quickly and easily

With a simple change-out of a few modules, you can modify FUSION performance, form and function to meet the evolving requirements of your system. This streamlines prototyping stages and aids the evolution of your system. Refer to the page opposite for an example of the modular changeout flexibility Optem FUSION presents.

Camera Mount

Mates FUSION with C, CS, F, EOS, 4/3-mount cameras and more

Camera Tube

Modifies magnification to your camera optimizing chip coverage & performance

Core Optical Module

Determines optical function: Fixed, 7:1 or 12.5:1 zoom magnification— motorized or manual

Lower Function Module

Integrates internal focus—motorized or manual—and coaxial LED illumination options

Lower Lens

Modifies taking magnification to affect field of view, NA and working distance



Notes

Lined area for notes, consisting of multiple horizontal blue lines.





+1 503 439 6446

+1 800 668 8752
USA and CAN

**2545 Railroad Street, Suite 300
Pittsburgh, PA 15222
United States**

**excelitas.com
Optem.info@excelitas.com**

For a complete listing of our global offices, visit www.excelitas.com/locations

©2025 Excelitas Technologies Corp. Optem® is a registered trademark of Excelitas Technologies Corp. The Excelitas logo and design are registered trademarks of Excelitas Technologies Corp. All other trademarks are the property of their respective owners, and neither Excelitas Technologies Corp., its affiliates or subsidiaries, or any of their respective products, are endorsed or sponsored by or affiliated in any way whatsoever with those organizations whose trademarks and/or logos may be mentioned herein for reference purposes. Excelitas Canada Inc. reserves the right to change this document at any time without notice and disclaims liability for editorial, pictorial or typographical errors.

Optem FUSION Specifiers Guide_2025.09