


data sheet

pco. lens adapter F-mount

The **pco.** lens adapter F-mount is a lens adapter to connect a F-mount lens to a huge variety of PCO cameras. The F-mount adapter supports lenses with an automatic diaphragm. It manually sets the lens aperture by turning the upper adjustment ring of the adapter. F-mount lenses without an automatic diaphragm can be connected to the mount at the camera, but the aperture cannot be changed. The lower adjustment ring is used to adjust the back focal distance.

Use our **MachVis** lens selector software to learn more about our cameras and their optical interface.

dimensions

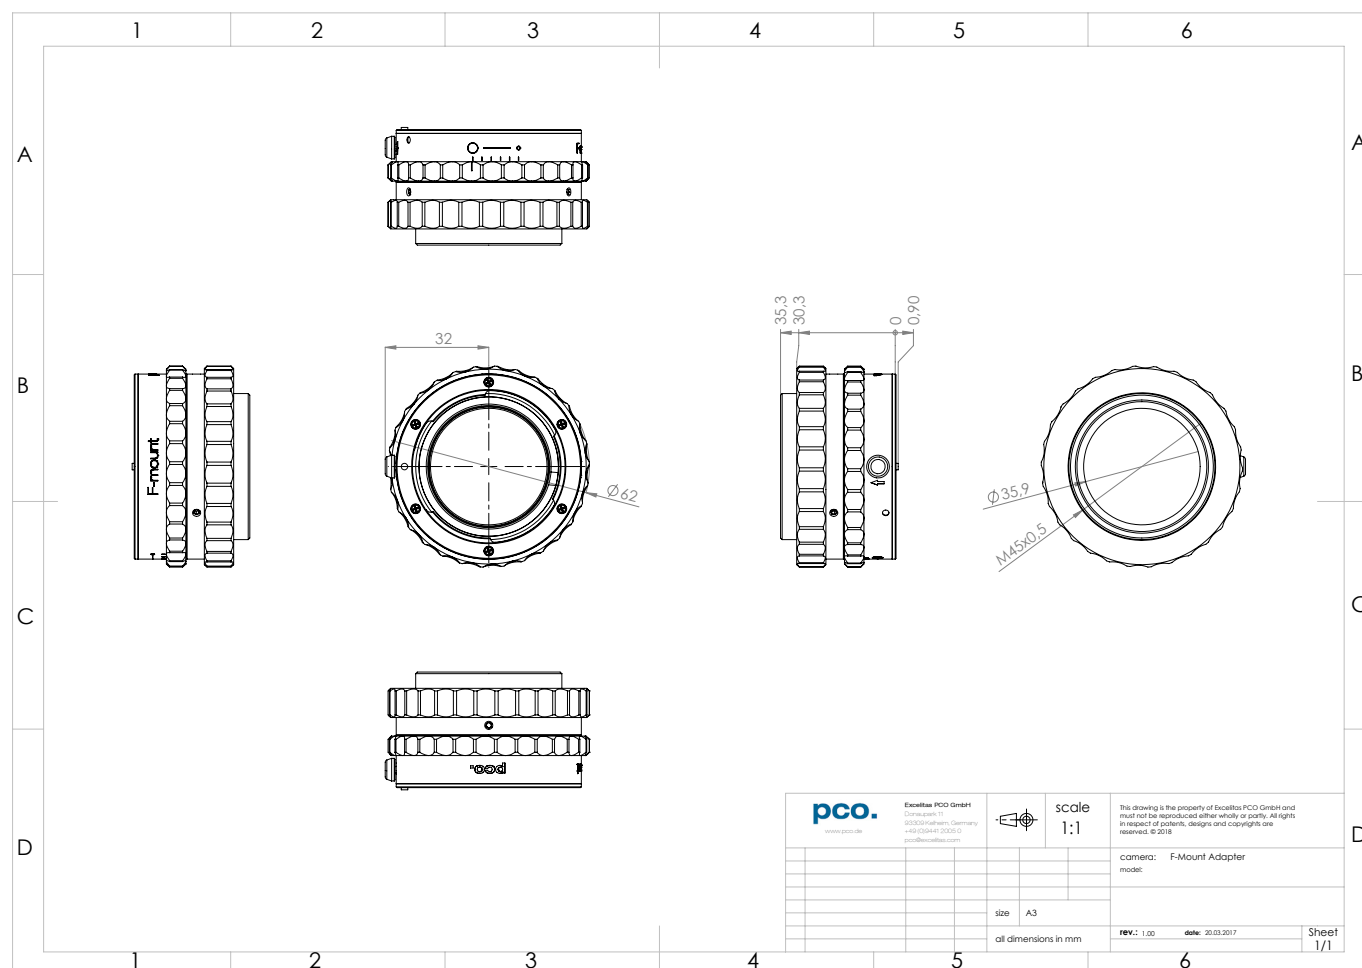

ordering information

pco.lens adapter F-mount

30109000060

F-mount lens adapter including cover

EXCELITAS
TECHNOLOGIES®

Excelitas PCO GmbH
Donaupark 11
93309 Kelheim, Germany

+49 (0) 9441 2005 0
pco@excelitas.com
www.excelitas.com/pco

pco.
An Excelitas Technologies Brand