

## 35-07-61-000 – 3.0A Ultra High Power Coaxial LED Illuminator

### Optem® FUSION




#### Features

- Ultra High-power white light LED
- Available in 1.5A and 3A
- 6500K Correlated Colour Temperature
- Greater than 50K hour lifetime
- Direct integration to FUSION coaxial modules
- Full SW support with FUSION Controller
- PWM or constant current control with FUSION Controller
- Adjustable PWM frequency 1.5-100000 Hz.
- Adjustable lens to optimize illumination uniformity
- Other colour LEDs available upon customer request

*Optem® FUSION 1.5A and 3A Coaxial Illumination Modules*

The high-power LEDs feature a compact industrial design optimized to deliver ultra-high uniform illuminance critical for the most challenging machine vision applications. An integrated adjustable lens allows fine-tuning the illumination uniformity.

The high-power LEDs seamlessly integrate into the Optem® FUSION micro-imaging platform, extending the modular nature of the platform. Combined with the FUSION Controller, the LEDs offer adjustable software control for pulse width modulation and constant current control.

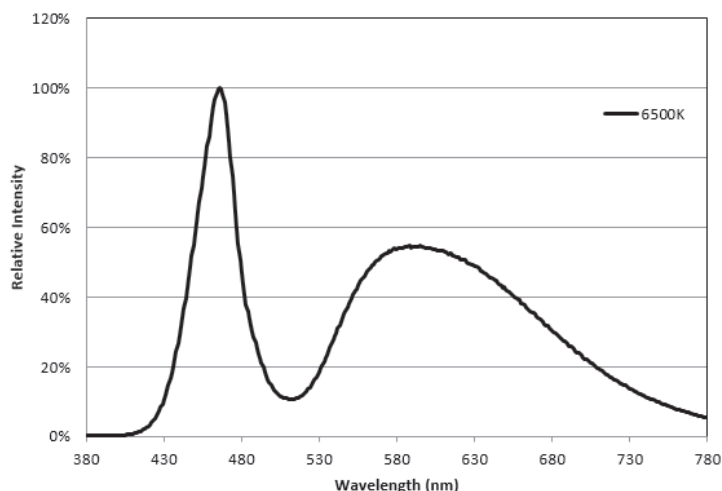

#### Applications

- High throughput micro-imaging
- High precision manufacturing
- Automated Optical Inspection
- Quality control
- Semiconductor
- MEMs
- Bio-imaging
- Metrology
- R&D and Laboratory

# 35-07-61-000 – 3.0A Ultra High Power Coaxial LED Illuminator


## Optem® FUSION

### Specifications

Parameter	1.5A	3.0A	Units
Wavelength	White LED	White LED	-
Correlated Colour Temperture (CCT)	6500	6500	K
Lifetime	>50000	>50000	Hours
Illuminance (70mm from lens output)	3.4	6.0	MLux
Illuminance (through 50/50 at back aperture of objective)	1.7	3.0	MLux
Maximum Current	1.5	3.0	A
Control (with FUSION Controller)	PWM or Current	PWM or Current	-

Notes: <sup>1</sup>

### Dimensions

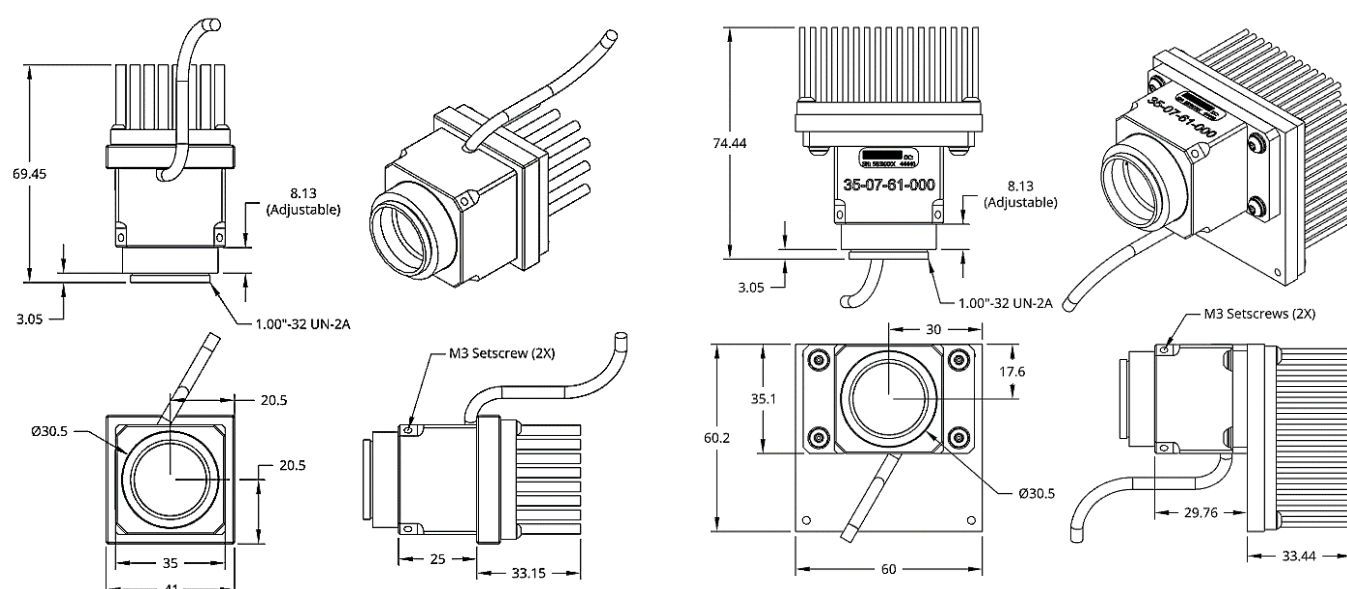

### About Excelitas

Excelitas is a leading industrial technology manufacturer focused on delivering innovative, market-driven photonic solutions to meet the illumination, optical, optronic, sensing, detection and imaging needs of our OEM and end-user customers.

Serving a vast array of applications across biomedical, scientific, semiconductor, industrial manufacturing, safety, security, consumer products, defense and aerospace sectors, Excelitas stands committed to enabling our customers' success in their many various end-markets.

**Excelitas Technologies Corp.**  
22001 Dumberry Road  
Vaudreuil-Dorion, Quebec  
Canada J7V 8P7  
Tel.: (+1) 450.424.3300  
Toll-free: (+1) 800.775.6786

**Excelitas Deutschland GmbH**  
Hans-Riedl-Str. 9  
D-85622 Feldkirchen  
Germany  
Telephone: +49 (0) 551 6935-0

**Excelitas Technologies  
Singapore, Pte. Ltd.**  
8 Tractor Rd  
Singapore 627969  
Singapore  
Telephone: +65 64 99 7777

[Inspection@excelitas.com](mailto:Inspection@excelitas.com)

[Inspection@excelitas.com](mailto:Inspection@excelitas.com)

[Inspection@excelitas.com](mailto:Inspection@excelitas.com)



For a complete listing of our global offices, visit [www.excelitas.com/locations](http://www.excelitas.com/locations)

© 2015 Excelitas Technologies Corp. All rights reserved. The Excelitas logo and design are registered trademarks of Excelitas Technologies Corp. All other trademarks not owned by Excelitas Technologies or its subsidiaries that are depicted herein are the property of their respective owners. Excelitas reserves the right to change this document at any time without notice and disclaims liability for editorial, pictorial or typographical errors.